

Communicative Retrofit rotary actuator for rotary valves and butterfly valves

- Torque motor 40 Nm
- Nominal voltage AC/DC 24 V
- Control modulating, communicative 2...10 V variable
- Position feedback 2...10 V variable
- Conversion of sensor signals
- Communication via Belimo MP-Bus



MP27BUST

GR24A-MP-R

Technical data		
Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption in operation	4 W
	Power consumption in rest position	1.5 W
	Power consumption for wire sizing	7 VA
	Connection supply / control	Cable 1 m, 4 x 0.75 mm ²
	Parallel operation	Yes (note the performance data)
Data bus communication	Communicative control	MP-Bus
	Number of nodes	MP-Bus max. 8
Functional data	Torque motor	40 Nm
	Operating range Y	210 V
	Input Impedance	100 kΩ
	Operating range Y variable	Start point 0.530 V
	, 3	End point 2.532 V
	Options positioning signal	Open/close
		3-point (AC only)
		Modulating (DC 032 V)
	Position feedback U	210 V
	Position feedback U note	Max. 0.5 mA
	Position feedback U variable	Start point 0.58 V End point 2.510 V
	Position accuracy	±5%
	Manual override	with push-button, can be locked
	Running time motor	90 s / 90°
	Running time motor variable	75270 s
	Adaptation setting range	manual (automatic on first power-up)
	Adaptation setting range variable	No action
	Adaptation setting range variable	Adaptation when switched on
		Adaptation after pushing the gear
		disengagement button
	Override control	MAX (maximum position) = 100%
		MIN (minimum position) = 0%
	Overwide control and the	ZS (intermediate position, AC only) = 50%
	Override control variable	MAX = (MIN + 33%)100% MIN = 0%(MAX – 33%)
		ZS = MINMAX
	Sound power level, motor	45 dB(A)
	Position indication	Mechanically (integrated)
		·-···· ,g. *****,

Safety data

Protection class IEC/EN

III, Safety Extra-Low Voltage (SELV)



Technical data sheet	GR24A-MP-R
Power source UL	Class 2 Supply
Degree of protection IEC/EN	IP54
Degree of protection NEMA/UL	NEMA 2
Enclosure	UL Enclosure Type 2
EMC	CE according to 2014/30/EU
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
Certification UL	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case
Mode of operation	Type 1
Rated impulse voltage supply / control	0.8 kV
Pollution degree	3
Ambient temperature	050°C
Storage temperature	-4080°C
Ambient humidity	Max. 95% RH, non-condensing
Servicing	maintenance-free

Weight



Mechanical data

Safety data

This device has been designed for use in stationary heating, ventilation and air-conditioning
systems and must not be used outside the specified field of application, especially in aircraft or
in any other airborne means of transport.

F05/F07

1.9 kg

- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The switch for changing the direction of rotation may only be operated by authorised specialists. The direction of rotation must not in particular be reversed in a frost protection circuit.
- The surface temperature between actuator and fitting may not exceed 50°C.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Safety notes

Mode of operation

Conventional operation:

Connection flange

Weight

The actuator is connected with a standard modulating signal of 0...10 V and drives to the position defined by the control signal. The measuring voltage U serves for the electrical display of the actuator position 0.5...100% and as control signal for other actuators.

Operation on Bus:

The actuator receives its digital positioning signal from the higher level controller via the MP-Bus and drives to the position defined. Connection U serves as communication interface and does not supply an analogue measuring voltage.

Converter for sensors

Connection option for a sensor (passive or active sensor or switching contact). The MP actuator serves as an analogue/digital converter for the transmission of the sensor signal via MP-Bus to the higher level system.



Parametrisable actuators

The factory settings cover the most common applications. Single parameters can be modified with the Belimo Service Tools MFT-P or ZTH EU.

Application

For rotary valves and butterfly valves with the following mechanical specifications:

- ISO 5211: F05 or F07 (hole circle diameter on the flange for mounting the fitting)

- ISO 5211: quadratic or flat head spindle head geometry

Tappet shaft

The form fit adapter is not included in the scope of delivery (see «Accessories»).





Туре	s
	[mm]
ZGV-14	14
ZGV-16	16
ZGV-17	17
ZGV-19	19



Туре	s [mm]	d 8 [mm]
ZGF-14	14	18
ZGF-17	17	22

Simple direct mounting

Simple direct mounting on the rotary valve or butterfly valve with mounting flange. The mounting orientation in relation to the fitting can be selected in 90° steps.

Manual override

Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked).

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Home position

The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaptation, which is when the operating range and position feedback adjust themselves to the mechanical setting range.

The actuator then moves into the position defined by the positioning signal.

Factory setting: Y2 (counter-clockwise rotation).

Adaptation and synchronisation

An adaptation can be triggered manually by pressing the "Adaptation" button or with the PC-Tool. Both mechanical end stops are detected during the adaptation (entire setting range).

Automatic synchronisation after pressing the gearbox disengagement button is configured. The synchronisation is in the home position (0%).

The actuator then moves into the position defined by the positioning signal.

A range of settings can be adapted using the PC-Tool (see MFT-P documentation)

Accessories

Gateways	Description	Туре
	Gateway MP zu BACnet MS/TP	UK24BAC
	Gateway MP to Modbus RTU	UK24MOD
Electrical accessories	Description	Туре
	Auxiliary switch 1 x SPDT add-on	S1A
	Auxiliary switch 2 x SPDT add-on	S2A
	Feedback potentiometer 140 Ω add-on	P140A
	Feedback potentiometer 200 Ω add-on	P200A
	Feedback potentiometer 500 Ω add-on	P500A
	Feedback potentiometer 1 kΩ add-on	P1000A
	Feedback potentiometer 2.8 kΩ add-on	P2800A
	Feedback potentiometer 5 kΩ add-on	P5000A
	Feedback potentiometer 10 kΩ add-on	P10000A
	MP-Bus power supply for MP actuators	ZN230-24MP



Technical data sheet	GR24A-MP-R
Description	Туре
Form fit adapter square 14x14x40 mm (LxWxH)	ZGV-14
Form fit adapter square 16x16x40 mm (LxWxH)	ZGV-16
Form fit adapter square 17x17x20 mm (LxWxH)	ZGV-17
Form fit adapter square 19x19x40 mm (LxWxH)	ZGV-19
Form fit adapter flat head 14xØ18x33 mm (WxØxH)	ZGF-14
Form fit adapter flat head 17xØ22x33 mm (WxØxH)	ZGF-17
Description	Туре
Service Tool, with ZIP-USB function, for parametrisable and	ZTH EU
communicative Belimo actuators, VAV controller and HVAC perform	ance
devices	
Belimo PC-Tool, Software for adjustments and diagnostics	MFT-P
Adapter for Service-Tool ZTH	MFT-C

Electrical installation



Mechanical accessories

Service tools


Supply from isolating transformer.

to MP/PP terminal

Parallel connection of other actuators possible. Observe the performance data. Direction of rotation switch is covered. Factory setting: Direction of rotation Y2.

Wiring diagrams

AC/DC 24 V, modulating

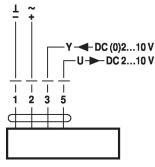

Cable colours:

1 = black

2 = red


3 = white

5 = orange

Operation on the MP-Bus

Connection cable 5 m, A: RJ11 6/4 ZTH EU, B: 6-pin for connection to

Connection cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection

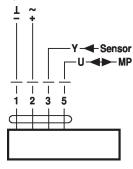

Cable colours:

ZK1-GEN

ZK2-GEN


1 = black

2 = red

3 = white


5 = orange

Connection of external switching contact

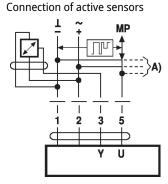

A) additional MP-Bus nodes (max. 8)

- Supply AC/DC 24 V
- Output signal DC 0...10 V (max. DC 0...32 V)
- Resolution 30 mV

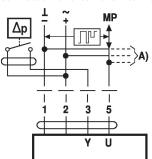


A) additional MP-Bus nodes (max. 8)

• Switching current 16 mA @ 24

• Start point of the operating range must be parametrised on the MP actuator as $\geq 0.5 \text{ V}$

Connection of passive sensors

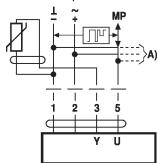

Ni1000	–28+98°C	8501600 Ω ²⁾
PT1000	−35+155°C	8501600 Ω ²⁾
NTC	-10+160°C 1)	200 Ω60 kΩ ²)

A) additional MP-Bus nodes (max. 8)

1) Depending on the type

2) Resolution 1 Ohm


Compensation of the measured value is recommended




Functions

Functions when operated on MP-Bus

Connection on the MP-Bus

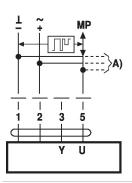

A) additional MP-Bus nodes (max. 8)

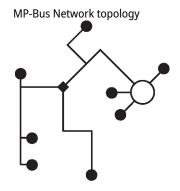


There are no restrictions for the network topology (star, ring, tree or mixed forms are permitted).

Supply and communication in one and the same 3-wire cable

- no shielding or twisting necessary
- no terminating resistors required


Functions with basic values (conventional mode)

Override control with AC 24 V with relay contacts

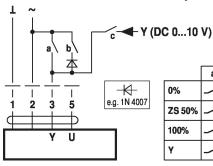


	а	b	C
0%	/_	/	/-
ZS 50%	<u> </u>	Ż	/-
100%	1	\	/-
γ	<u></u>	/-	1


Override control with AC 24 V with rotary switch

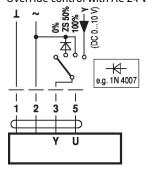


Control remotely 0...100% with positioner SG..


Minimum limit with positioner SG..

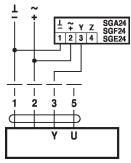

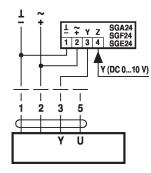


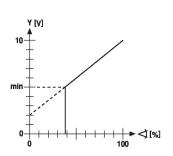

Follow-up control (position-dependent)

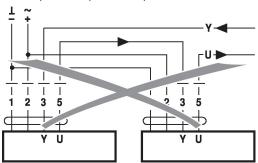

Control with 4...20 mA via external resistor

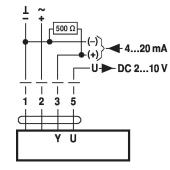


Caution:

The operating range must be set to DC 2...10 V. The 500 Ω resistor converts the

4...20 mA current signal to a voltage signal DC 2...10 V



Functional check

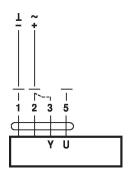

Procedure


- 1. Connect 24 V to connections 1 and 2
- 2. Disconnect connection 3:
- with direction of rotation Y1:

Actuator rotates to the left


- with direction of rotation Y2
- Actuator rotates to the right
- 3. Short-circuit connections 2 and 3:
- Actuator runs in opposite direction

Functions with specific parameters (parametrisation necessary)

Override control and limiting with AC 24 V with relay contacts

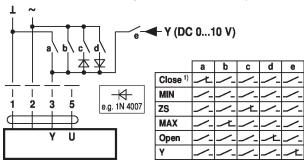



Override control and limiting with AC 24 V with rotary switch

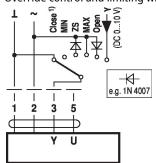

1) **Caution:** This function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.


Control open/close

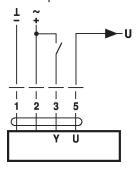

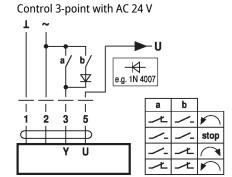



Operating controls and indicators

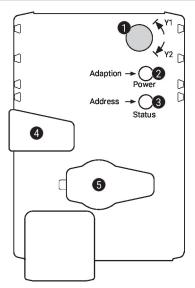

1 Direction of rotation switch

Switch over: Direction of rotation changes

2 Push-button and LED display green

Off: No power supply or malfunction

On: In operation

Press Triggers angle of rotation adaptation, followed by standard mode

button:

Push-button and LED display yellow

Off: Standard mode

On: Adaptation or synchronisation process active

Flickering: MP-Bus communication active

Flashing: Request for addressing from MP client

Press button: Confirmation of the addressing

4 Gear disengagement button

Press button: Gear disengages, motor stops, manual override possible

Release button: Gear engages, standard mode

Service plug

For connecting parametrisation and service tools

Check power supply connection

2 Off and 3 On Possible wiring error in power supply


Service

Service tools connection

The actuator can be parametrised by ZTH EU via the service socket.


For an extended parametrisation the PC tool can be connected.

Connection ZTH EU / PC-Tool

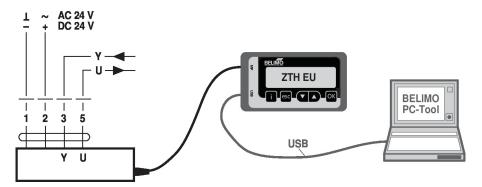



Dimensions

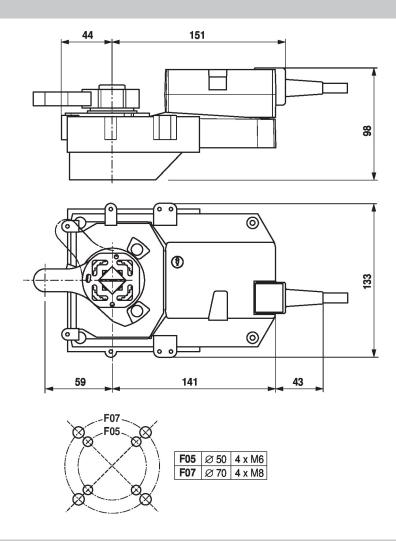

Further documentation

- Overview MP Cooperation Partners
- Tool connections
- Introduction to MP-Bus Technology
- The complete product range for water applications
- Data sheets for ball valves
- Installation instructions for actuators and/or ball valves
- General notes for project planning