



Modulating globe valve actuator for 2-way and 3-way globe valves

- Actuating force 1500 N
- Nominal voltage AC/DC 24 V
- Control modulating 0.5...10 V
- Stroke 20 mm



Technical data

FI	ectri	cal	da	ıt:

Nominal voltage	AC/DC 24 V	
Nominal voltage frequency	50/60 Hz	
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V	
Power consumption in operation	4 W	
Power consumption in rest position	1.5 W	
Power consumption for wire sizing	6 VA	
Connection supply / control	Terminals with cable 1 m, 4 x 0.75 mm ² (Terminal 4 mm ²)	
Parallel operation	Yes (note the performance data)	
Actuating force motor	1500 N	

Functional data

· aranaraparation	res (note the periormance data)
Actuating force motor	1500 N
Operating range Y	0.510 V
Input Impedance	100 kΩ
Position feedback U	0.510 V
Position feedback U note	Max. 0.5 mA
Position accuracy	±5%
Manual override	with push-button, can be locked
Stroke	20 mm
Running time motor	35 s / 20 mm
Adaptation setting range	manual (automatic on first power-up)
Sound power level, motor	60 dB(A)
Position indication	Mechanically, 520 mm stroke
Protection class IFC/FN	III. Safety Extra-l ow Voltage (SELV)

Safety data

Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)	
Power source UL	Class 2 Supply	
Degree of protection IEC/EN	IP54	
Degree of protection NEMA/UL	NEMA 2	
Enclosure	UL Enclosure Type 2	
EMC	CE according to 2014/30/EU	
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14	
Certification UL	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1	
	The UL marking on the actuator depends on the production site, the device is UL-compliant in any case	
Mode of operation	Type 1	
Rated impulse voltage supply / control	0.8 kV	
Pollution degree	3	
Ambient temperature	050°C	
Storage temperature	-4080°C	
Ambient humidity	Max. 95% RH, non-condensing	



Technical data sheet SVC24A-SZ-TPC

Safety data

Servicing maintenance-free

Weight Weight

Weight 1.2 kg

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning
 systems and must not be used outside the specified field of application, especially in aircraft or
 in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The switch for changing the direction of motion and so the closing point may be adjusted only
 by authorised specialists. The direction of motion is critical, particularly in connection with
 frost protection circuits.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Mode of operation The actuator is connected with a standard modulating signal of 0...10 V and drives to the

position defined by the positioning signal. The measuring voltage U serves for the electrical display of the actuator position 0.5...100% and as slave control signal for other actuators.

Simple direct mounting Simple direct mounting on the globe valve by means of form-fit hollow clamping jaws. The

actuator can be rotated by 360° on the valve neck.

Manual override Manual override with push-button possible (the gear is disengaged for as long as the button is

pressed or remains locked).

The stroke can be adjusted by using a hexagon socket screw key (4 mm), which is inserted into

the top of the actuator. The stroke shaft extends when the key is rotated clockwise.

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when the

end stop is reached.

Combination valve/actuator Refer to the valve documentation for suitable valves, their permitted fluid temperatures and

close-off pressures.

Position indication The stroke is indicated mechanically on the bracket with tabs. The stroke range adjusts itself

automatically during operation.

Home position Factory setting: Actuator spindle is retracted.

When valve-actuator combinations are shipped, the direction of motion is set in accordance

with the closing point of the valve.

The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator

carries out an adaption, which is when the operating range and position feedback adjust themselves to the mechanical setting range.

The actuator then moves into the position defined by the positioning signal.

Adaptation and synchronisation An adaption can be triggered manually by pressing the "Adaption" button. Both mechanical end

stops are detected during the adaption (entire setting range).

The actuator then moves into the position defined by the positioning signal.

Setting direction of stroke When actuated, the stroke direction switch changes the running direction in normal operation.

Accessories

Electrical accessories Description		Туре
	Auxiliary switch 2 x SPDT add-on	S2A-H



Electrical installation




Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.

Direction of stroke switch factory setting: Actuator spindle retracted (🛦).

Wiring diagrams

AC/DC 24 V, modulating

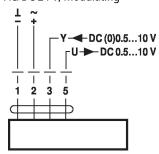

Cable colours:


1 = black

2 = red


3 = white

5 = orange

Override control (frost protection circuit)

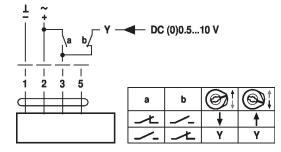

Operating controls and indicators

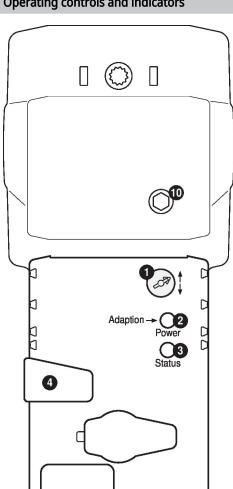

Direction of stroke switch

Switch over: Direction of stroke changes

Push-button and LED display green

No power supply or malfuntion

On: In operation

Press button: Triggers stroke adaptation, followed by standard mode

3 Push-button and LED display yellow

Off: Standard mode

Adaptation process active On:

Press button: No function

Gear disengagement button

Press button: Gear disengages, motor stops, manual override possible

Gear engages, synchronisation starts, followed by standard mode Release button:


Manual override

Clockwise: Actuator spindle extends Counterclockwise: Actuator spindle retracts



Dimensions

Dimensional drawings

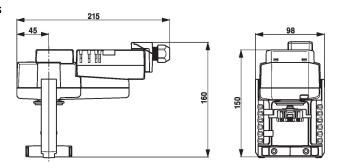

Further documentation

- The complete product range for water applications
- Data sheets for globe valves
- Installation instructions for actuators and/or globe valves
- Notes for project planning 2-way and 3-way globe valves
- General notes for project planning