

Technical data sheet

CQ24A-MPL

Communicative rotary actuator for zone valves

- Torque motor 1 Nm
- Nominal voltage AC/DC 24 V
- Control communicative
- Snap-assembly of the actuator
- Flow setting variable
- Communication via Belimo MP-Bus



Technical data

Electrical data	Nominal voltage	AC/DC 24 V	
	Nominal voltage frequency	50/60 Hz	
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V	
	Power consumption in operation	0.6 W	
	Power consumption in rest position	0.4 W	
	Power consumption for wire sizing	1.1 VA	
	Connection supply / control	Cable 1 m, 3 x 0.75 mm ²	
	Parallel operation	Yes (note the performance data)	
Data bus communication	Communicative control	MP-Bus	
	Number of nodes	MP-Bus max. 8 (16)	
Functional data	Torque motor	1 Nm	
	Manual override	with actuator (clicked out)	
	Running time motor	75 s / 90°	
	Sound power level, motor	35 dB(A)	
	Position indication	Mechanical	
	Flow setting	see product features	
Safety data	Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)	
	Degree of protection IEC/EN	IP40	
	EMC	CE according to 2014/30/EU	
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14	
	Mode of operation	Type 1	
	Rated impulse voltage supply / control	0.8 kV	
	Pollution degree	2	
	Ambient temperature	540°C	
	Storage temperature	-4080°C	
	Ambient humidity	Max. 95% RH, non-condensing	
Servicing		maintenance-free	
Weight	Weight	0.21 kg	



Technical data sheet



• This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Mode of operation	The actuator receives its digital positioning signal from the higher level controller via the MP- Bus and drives to the position defined. Connection MP serves as communication interface and does not supply an analogue measuring voltage.	
	Note: Neither a conventional operation with a standard signal nor a parametrisation of signals (e.g. running time) is possible. With the parametrisation devices a functional check can be executed and the MP adress can be assigned.	
	When controlling CQ(K) actuators, it must be ensured that via MP-Bus, the setpoint steps are specified in whole percentages.	
Simple direct mounting	Tool-free snap assembly.	
	The actuator can be plugged on the valve by hand (Caution! Just vertical movements). Pins must match the holes on the flange.	
	The mounting orientation in relation to the valve can be selected in 180° increments. (Possible two times)	
Manual override	Click out the actuator and rotate the valve spindle with the help of the actuator.	
Adjustable angle of rotation	The angle of rotation of the actuator can be changed by clip in 2.5° increments. This is used to set the maximum flow rate of the valve.	
High functional reliability	The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.	
Flow setting	Adjustable kv-values (C2Q, C4Q) are given in the respective zone valve data sheets.	
	2-way valve: Remove end stop clip and place at desired position.	
	3-way valve: Remove end stop clip (change-over application).	
	6-way valve: Remove end stop clip (cooling and heating application).	
	After every change of the flow setting by means of end stop clip, an adaptation must be triggered on the modulating actuators.	
	A CONTRACTION OF CONTRACTOR OF	

Pos 1 2 3 4 5 6 N



CQ24A-MPL



Gateways	Description	Туре
	Gateway MP zu BACnet MS/TP	UK24BAC
	Gateway MP to Modbus RTU	UK24MOD
Electrical accessories	Description	Туре
	MP-Bus power supply for MP actuators	ZN230-24MP
Mechanical accessories	Description	Туре
	Spindle extension CQ	ZCQ-E
	Housing cover CQ, Colour: white (RAL 9010)	ZCQ-W
	End stop clip, Multipack 20 pcs.	Z-ESCM
Service tools	Description	Туре
	Service Tool, with ZIP-USB function, for parametrisable and communicative Belimo actuators, VAV controller and HVAC performance devices	ZTH EU
	Belimo PC-Tool, Software for adjustments and diagnostics	MFT-P
	Adapter for Service-Tool ZTH	MFT-C
	Connection cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection to MP/PP terminal	ZK2-GEN


Electrical installation

Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.






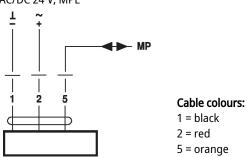


Functions

Functions when operated on MP-Bus Connection on the MP-Bus

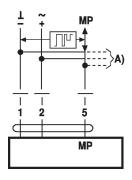

A) more actuators (max. 8)

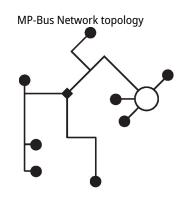

There are no restrictions for the network topology (star, ring, tree or mixed forms are permitted). Supply and communication in one and the same 3-wire cable • no shielding or twisting necessary • no terminating resistors required



Operating controls and indicators


Q

	Push-button and LED display yellow			
€ Adaption	On:	Angle of rotation adaptation active		
2 Status	Press button:	Triggers angle of rotation adaptation, followed by standard mode		
MPL Address	MPL 2 Push-button and LED display green			
	Off:	No power supply or no MP-Bus level		
	On:	Power supply and MP-Bus level OK		
	Flickering:	MP-Bus communication active		
	Flashing:	Depiction of MP address (command from MP client)		
	- continous:	No MP address set		
	- with breaks:	Pulse in accordance with MP address (e.g. 5 = MP5)		
0	Press button:	Confirmation of the addressing		


Service

Service tools connection

The actuator can be parametrised by ZTH EU via terminal connection. For extended parametrisation the PC tool can be connected.

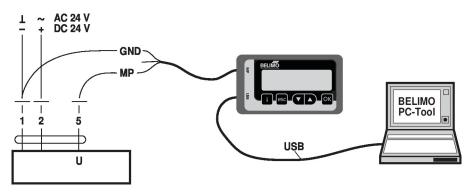

Dimensions

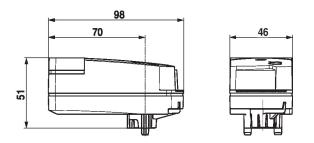

Further documentation

- Overview MP Cooperation Partners
- Tool connections
- Introduction to MP-Bus Technology
- The complete product range for water applications
- Data sheet for zone valves
- Installation instructions for zone valves and actuators
- General notes for project planning