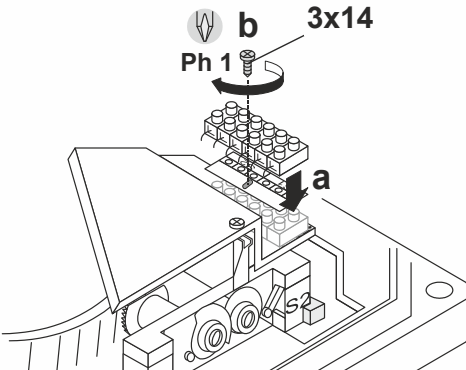
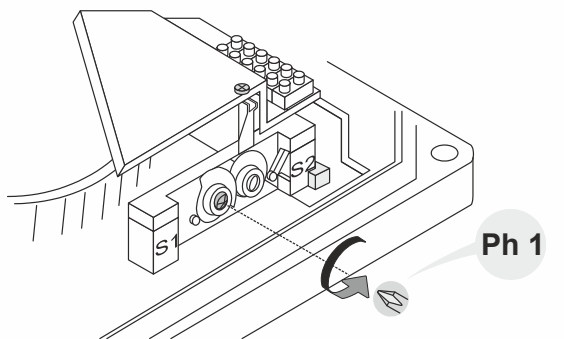
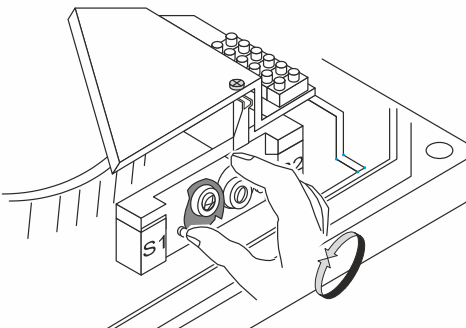
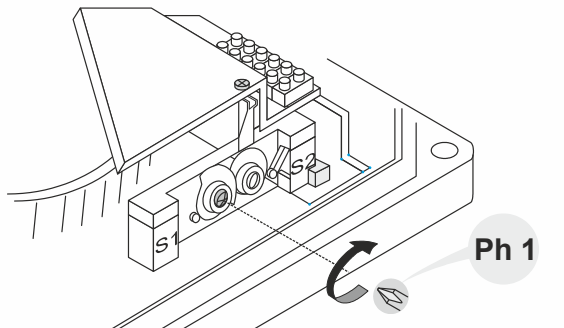
 
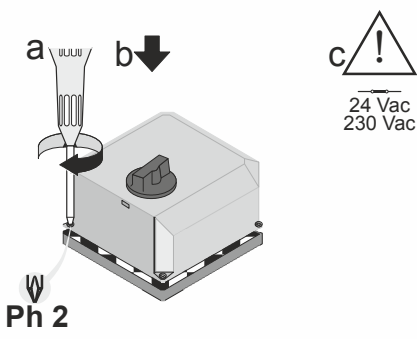


D Montageanweisung
 F Instructions d'installation
 I Istruzioni di montaggio
 NL Installatievoorschrift
 DK Installasjonsinstruktus
 N Installationsinstruktioner
 FIN Asennusohje
 S Installation instruktioner
 E Instrucciones de montaje

43191680-001/-002 Auxiliary Switches

INSTALLATION INSTRUCTIONS

<p>00A</p>	<p>00B</p> <p>max.: 5 A (res. load) 3 A (ind. load)</p> <p>24 V: ML6421A3005 ML6421B3004 ML7421A3004 ML7421B3003</p> <p>230 V: ML6421A3013 ML6421B3012</p>
<p>1</p>	<p>2</p>
<p>3</p>	<p>4</p>

<p>5</p> 	<p>6</p> 
<p>7</p> 	<p>8</p> 
<p>9</p> <p>max.: 5 A (res. load) 3 A (ind. load)</p>  <hr/> <p>ML6421A3005 ML6421B3004 ML7421A3004 ML7421B3003</p> <p style="text-align: center;">24 V, ONLY!</p> <hr/> <p>ML6421A3013 ML6421B3012</p> <p style="text-align: center;">230 V, ONLY!</p>	<p>10</p> 

Automation and Control Solutions

Honeywell GmbH
Böblinger Strasse 17
71101 Schönaich, Germany
Phone +49 (0) 7031 637 01
Fax +49 (0) 7031 637 740
<http://ecc.emea.honeywell.com>