



de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-handleiding
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
ru Инструкция по установке
zh 安裝指導

Ventileinsatz
Valve insert
Garniture de vanne
Ventilinsats
Aspakkingset
Inserto per valvola
Venttiilin sisäkappale
Insertar en la válvula
Ventilindsats
Wkładka regulacyjna
Vložka
Szelepbetét
Μηχανισμός διακόπτη
Внутренние части клапана
 阀芯插件

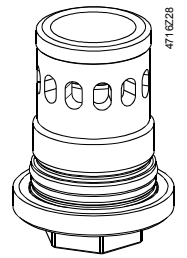


ASR..N

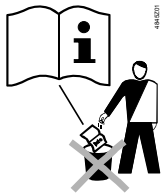


MVS661.25..N	MVS661.25..EX	ASR..N
MVS661.25-016N	MVS661.25-016EX	→ ASR0.16N
MVS661.25-0.4N	MVS661.25-0.4EX	→ ASR0.4N
MVS661.25-1.0N	MVS661.25-1.0EX	→ ASR1.0N
MVS661.25-2.5N	MVS661.25-2.5EX	→ ASR2.5N
MVS661.25-6.3N	MVS661.25-6.3EX	→ ASR6.3N

MVS661..N / MVS661..EX


1

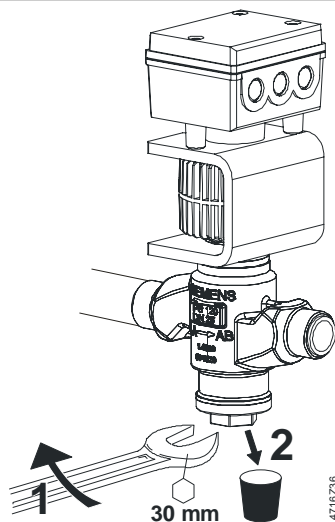


2

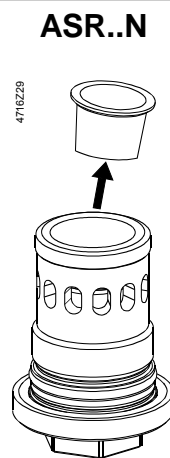


3

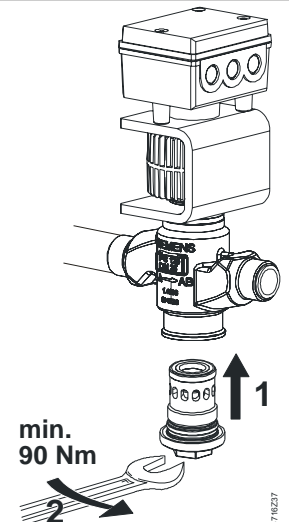


4

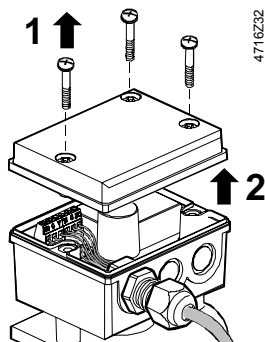

5

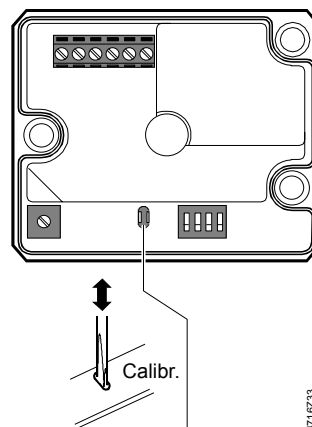

6

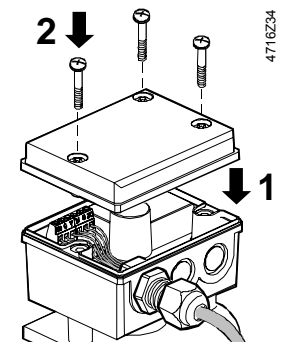

Issued by
Siemens Switzerland Ltd
Building Technologies Division
International Headquarters
Gubelstrasse 22
6301 Zug
Switzerland
Tel. +41 41-724 24 24

www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd, 2009

Technical specifications and availability subject to change without notice.