

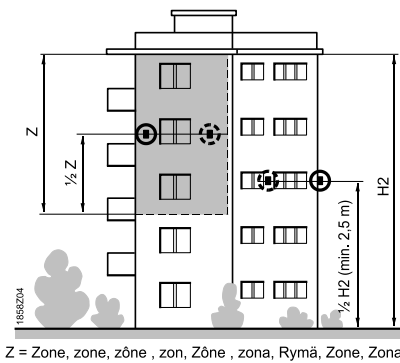
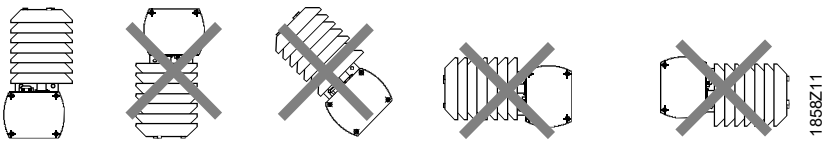
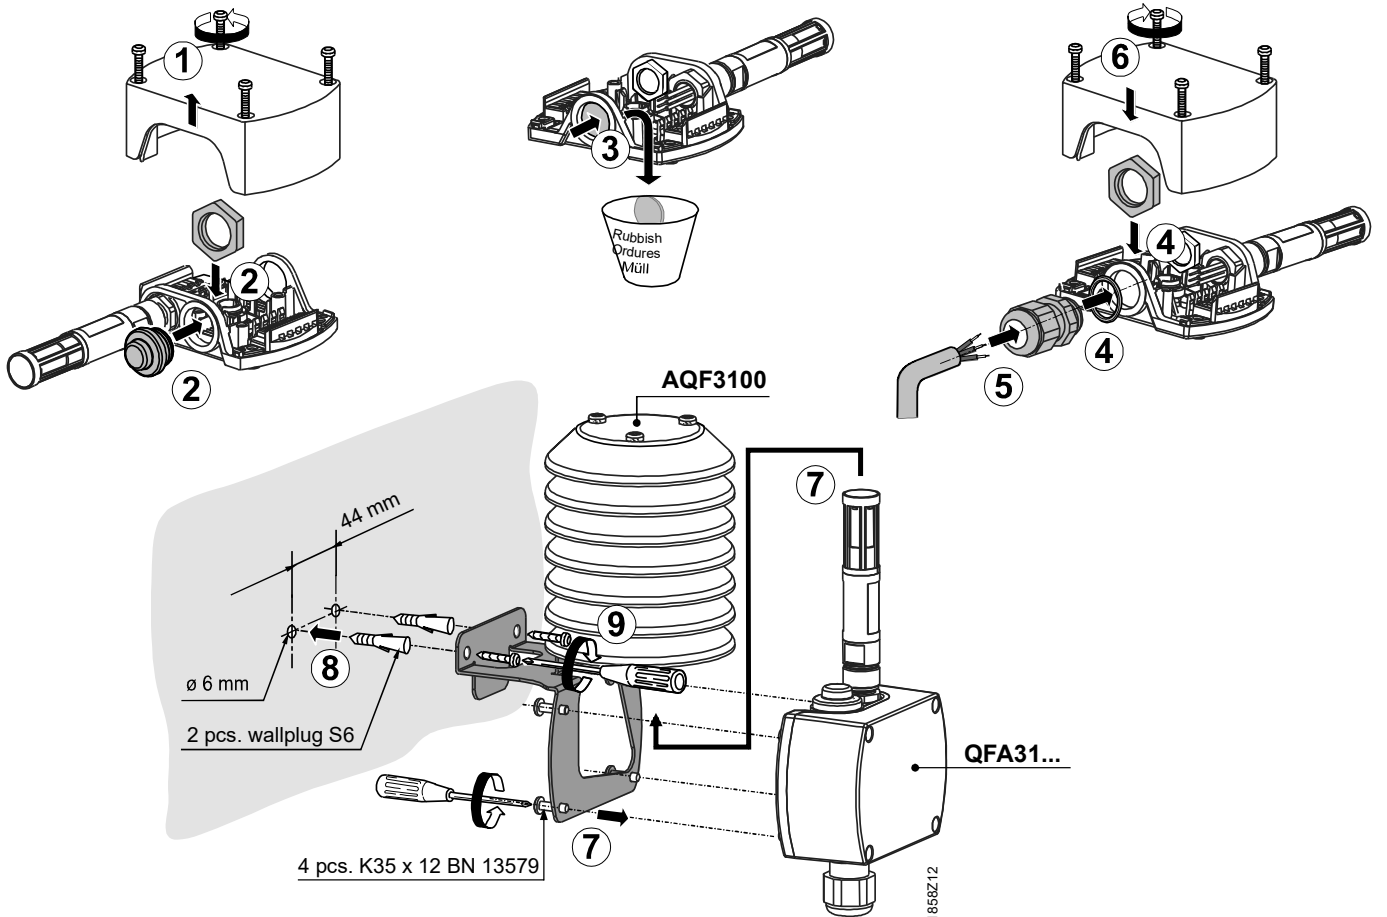


- de** Montageanleitung
- en** Mounting instructions
- fr** Instructions de montage
- sv** Monteringsinstruktion
- nl** Montage-aanwijzing
- it** Istruzioni di montaggio
- fi** Asennusohje
- es** Instrucciones de montaje
- da** Monteringsvejledning

QFA3150/MO + AQF3100

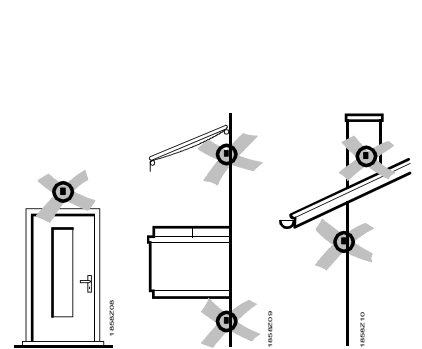


Z = Zone, zone, zône, zon, Zône, zona, Rymå, Zone, Zona

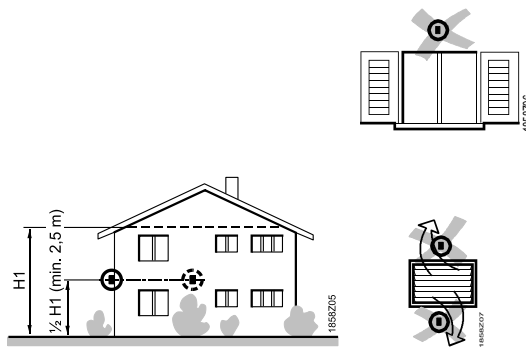


de Anschlussklemmen
en Connecting terminals
fr Bornes de raccordement

sv Anslutningsklämmor
nl Aansluitklemmen
it Morsettiere

fi Liittimet
es Bornas
da Tilslutningsklemmer

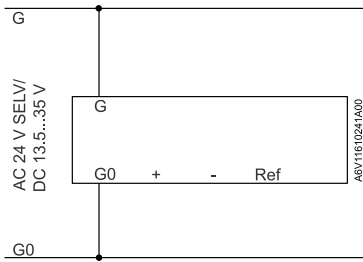

G AC 24 V $\pm 20\%$ / DC 13.5...35 V
G0 GND
+ RS485 Modbus A
- RS485 Modbus B
Ref GND_ISO



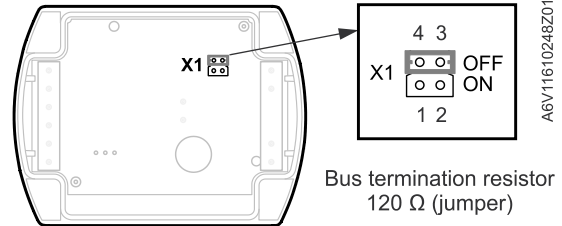


A6V11610248Z01

de Maßbilder
en Dimensions
fr Encombremets

sv Måttuppgifter
nl Maatschets
it Ingombri

fi Mittapiirros
es Dimensiones
da Målskitse

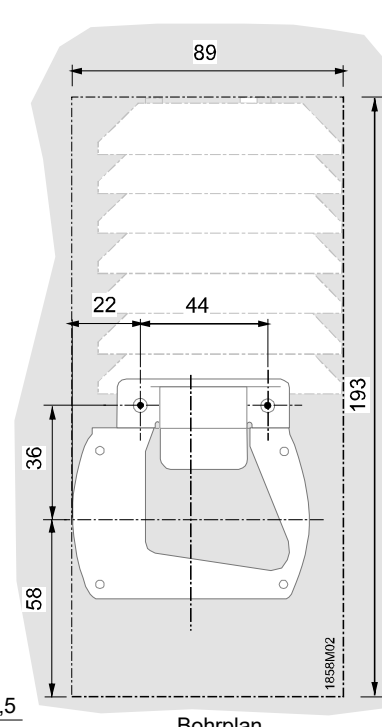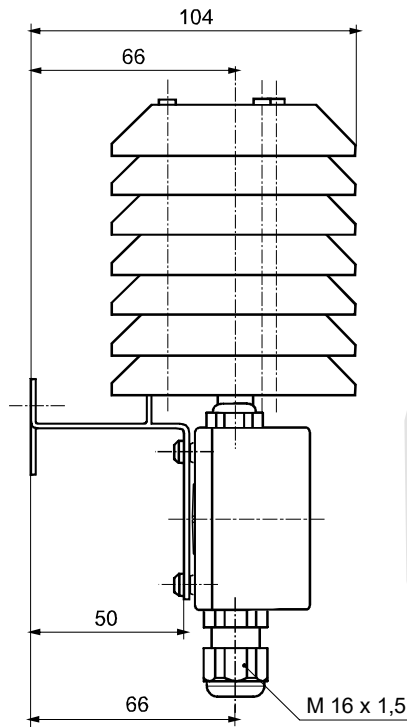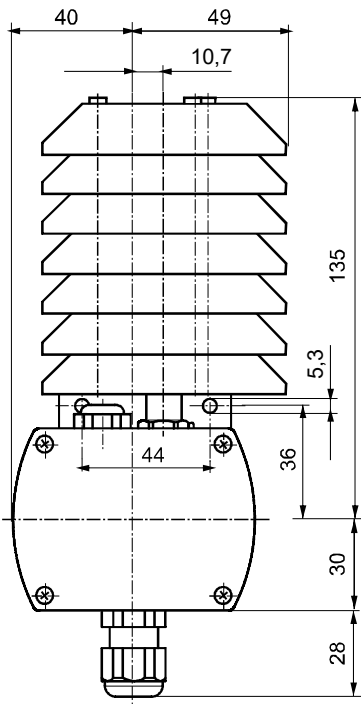

Maße in mm
 Dimensions in mm
 Dimensions en mm
 Mått i mm
 Maten in mm
 Dimensioni in mm
 Mitat mm
 Dimensiones en mm
 Mål i mm

Open Source Software (OSS)

All open source software components used within the product (including their copyright holders and the license conditions) can be found from the website <http://www.siemens.com/download?A6V11698658>.

Issued by
 Siemens Switzerland Ltd
 Smart Infrastructure
 Global Headquarters
 Theilerstrasse 1a
 CH-6300 Zug
 Tel. +41 58 724 2424
www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd, 2021
 Technical specifications and availability subject to change without notice.