

• Air damper size up to approx. 2 m<sup>2</sup>

- Torque motor 10 Nm
- Nominal voltage AC/DC 24 V
- Control modulating, communicative, hybrid, Cloud
- Conversion of sensor signals
- Ethernet 10/100 Mbit/s, TCP/IP, integrated web server
- Communication via BACnet IP, Modbus TCP and Cloud







VNM24A-LP1





# **Technical data**

	ectrica	l data
Г	ecirca	เผลเส

Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
Power consumption in operation	4.5 W
Power consumption in rest position	1.4 W
Power consumption for wire sizing	6.5 VA
Connection supply / control	Cable 1 m, 6 x 0.5 mm <sup>2</sup>
Connection Ethernet	RJ45 socket
Parallel operation	Yes (note the performance data)
Communicative control	Cloud BACnet IP

# **Data bus communication**

	Modbus TCP
Number of nodes	BACnet / Modbus see interface description

#### **Functional data**

Torque motor	10 Nm
Operating range Y	210 V
Input Impedance	34 kΩ
Operating range Y variable	0.510 V
Position accuracy	±5%
Direction of motion motor	selectable with switch 0/1
Direction of motion note	Y = 0%: At switch position 0 (ccw rotation) / 1
	(cw rotation)
Manual override	with push-button, can be locked
Angle of rotation	95°
Angle of rotation note	can be limited on both sides with adjustable
	mechanical end stops
Running time motor	150 s / 90°
Running time motor variable	43173 s
Adaptation setting range	manual
Sound power level, motor	35 dB(A)
Mechanical interface	Universal shaft clamp 826.7 mm
Position indication	Mechanically, pluggable
Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
FIOLECTION Class ILC/EN	III, Jaiety Latia-Low Voltage (SELV)

# Safety data

Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
Degree of protection IEC/EN	IP40
	IP54 when using protective cap or protective grommet for RJ45 socket
EMC	CE according to 2014/30/EU
Mode of operation	Type 1
Rated impulse voltage supply / control	0.8 kV
Pollution degree	3



#### Technical data sheet VNM24A-LP1

Safety data

Ambient humidity	Max. 95% RH, non-condensing	
Ambient temperature	-3050°C [-22122°F]	
Storage temperature	-4080°C [-40176°F]	
Servicing	maintenance-free	
Weight	0.84 kg	

Weight

# Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section, the design, the installation situation and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

### **Product features**

#### Mode of operation

The actuator is controlled via the Cloud, BACnet IP or Modbus TCP and drives to the position defined by the control signal. Various data points can be written and read via the same interfaces.

# Hybrid mode:

The actuator receives its analog control signal from the higher level controller and drives to the position defined. Using the Cloud, BACnet IP or Modbus TCP, various data points can be read and with the exception of the control signal written.

#### Converter for sensors

Connection option for two sensors (passive sensor, active sensor or switching contact). The actuator serves as an analogue/digital converter for the transmission of the sensor signal to the higher level system.

#### Communication

The parametrisation can be carried out through the integrated web server (RJ45 connection to the web browser), by communicative means or via the Cloud.

Additional information regarding the integrated web server can be found in the separate documentation.


### "Peer to Peer" connection

http://belimo.local:8080 The Notebook must be set to "DHCP". Make sure that only one network connection is active. Standard IP address:

# http://192.168.0.10:8080 Static IP address

Password (read-only):

User name: «quest» Password: «quest»

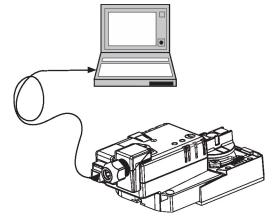

#### Simple direct mounting

Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an antirotation device to prevent the actuator from rotating.



# Technical data sheet

VNM24A-LP1

**Data recording** The recorded data (integrated data recording for 13 months) can be used for analytical

purposes

Download csv files via web browser.

Manual override Manual override with push-button possible (the gear train is disengaged for as long as the

button is pressed or remains locked).

**Adjustable angle of rotation** Adjustable angle of rotation with mechanical end stops.

 
High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when the

end stop is reached.

**Home position** The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator

carries out an adaptation, which is when the operating range and position feedback adjust themselves to the mechanical setting range.

The actuator then moves into the position defined by the control signal.



Adaptation and synchronisation

An adaptation can be triggered manually by pressing the "Adaptation" button. Both mechanical end stops are detected during the adaptation (entire setting range).

The actuator then moves into the position defined by the control signal.

#### **Accessories**

<b>Electrical accessories</b>	Description	Туре
	Grommet for RJ connection module, Multipack 50 pcs.	Z-STRJ.1
Tools	Description	Туре
	Service Tool, with ZIP-USB function, for parametrisable and communicative Belimo actuators, VAV controller and HVAC performance devices	ZTH EU
	Connection cable 5 m, A: RJ11 6/4 ZTH EU, B: 6-pin for connection to	ZK1-GEN


### **Electrical installation**



Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.

### Wiring diagrams

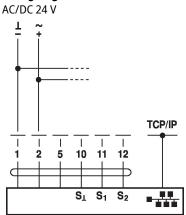

# Cable colours:

1 = black

2 = red

5 = orange

10 = yellow-black

11 = yellow-pink

12 = yellow-grey





Connection of a notebook for parametrisation and manual control via RJ45.

Optional connection via RJ45 (direct connection Notebook / connection via Intranet or Internet) for access to the integrated web server

### **Functions**




The connection diagrams shows connections for the first sensor on terminal S1, while the second sensor can be connected identically on terminal S2.

Parallel use of different sensor types is permitted.


For hybrid operation, S1 is used for the control signal Y and must be configured as an active sensor.

### Functions with specific parameters (parametrisation necessary)


TCP/IP (Cloud) / BACnet IP / Modbus TCP

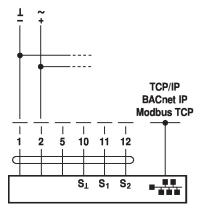


Connection of passive sensors

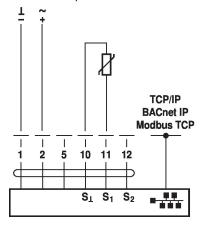

TCP/IP (Cloud) / BACnet IP / Modbus TCP with analogue setpoint (hybrid operation)

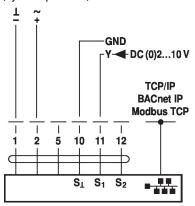


Connection of active sensors

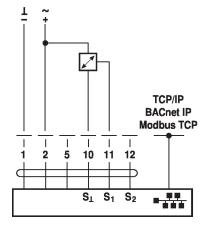




#### Switching contact connection

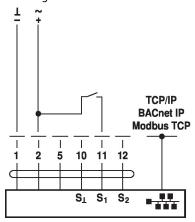

# **Operating controls and indicators**

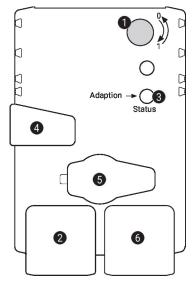

Direction of rotation switch

Switch over: Direction of rotation changes

2 LED display green

Off: No power supply or wiring error
On: Actuator starts operation

Flickering: In operation

3 Push-button and LED display yellow

Off: Standard mode

On: Adaptation or synchronisation process active

Press Triggers angle of rotation adaptation, followed by standard mode

button:

4 Manual override button

Press button: Gear train disengages, motor stops, manual override possible
Release Gear train engages, synchronisation starts, followed by standard

button: mode

5 Service plug

For connecting parametrisation and service tools


6 RJ45 socket

For the connection of TCP/IP (Cloud), BACnet IP and Modbus TCP



# **Dimensions**

 
# Spindle length



# Clamping range

	<u>OI</u>		$\bigcirc $
	826.7	≥8	≤26.7
*	820	≥8	≤20

<sup>\*</sup>Option: Shaft clamp mounted below (accessories K-NA needed)

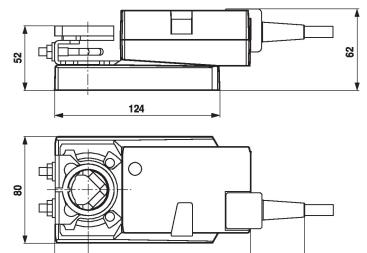

121

# **Further documentation**

- General notes for project planning
- Instruction Webserver
- BACnet Interface description

25

- Modbus Interface description
- Description clientAPI

# **Application notes**

• For digital control of actuators in VAV applications patent EP 3163399 must be considered.

41