






**de** Montageanleitung  
**en** Mounting instructions  
**fr** Instructions de montage  
**sv** Monteringsinstruktion  
**nl** Montagehandleiding  
**it** Istruzioni di montaggio  
**fi** Asennusohje  
**es** Instrucciones de montaje  
**da** Monteringsvejledning  
**pl** Instrukcja montażu

**Stellantriebe**  
**Actuators**  
**Servomoteur**  
**Ställdon**  
**Servomotoren**  
**Servocomandi**  
**Toimimoottorit**  
**Actuadores**  
**Motorer**  
**Siłowniki**




**cz** Montážní návod  
**hu** Szerelési útmutató  
**el** Οδηγίες εγκατάστασης  
**ru** Инструкция по установке  
**zh** 安装指导  
**ko** 설치지침

**Pohony**  
**Szelepállító motorok**  
**Κινητήρες**  
**Приводы**  
**执行器**  
**모터형 구동기**

**SUA21/3P**  
**SUE21P**

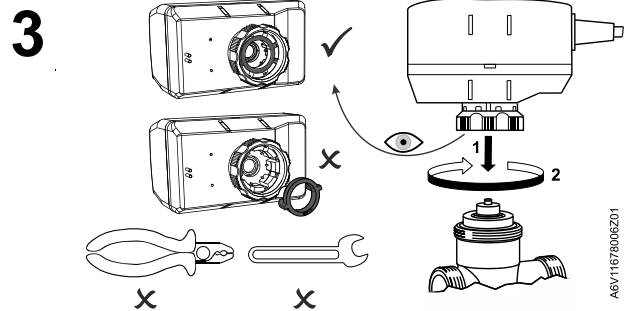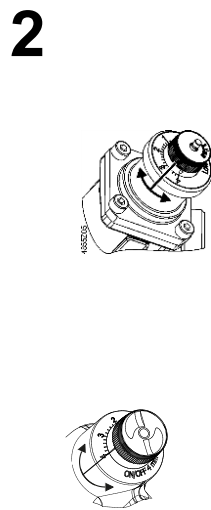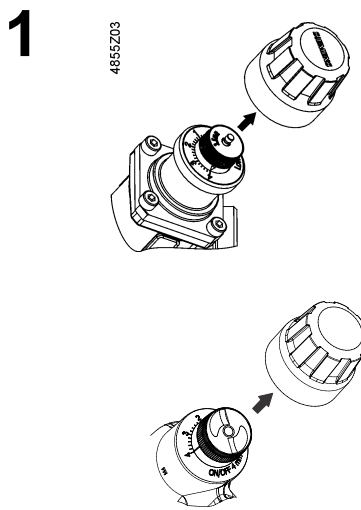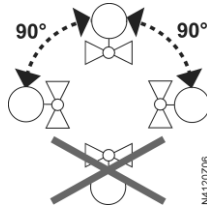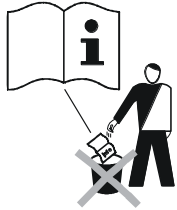

VPI46.10..	VPP46.10..	SUA21/3P
VPI46.15..	VPP46.15..	
VPI46.20..	VPP46.20..	SUE21P
VPI46.25..	VPP46.25..	
VPI46.32..	VPP46.32..	
VQI46..	VQP46..	

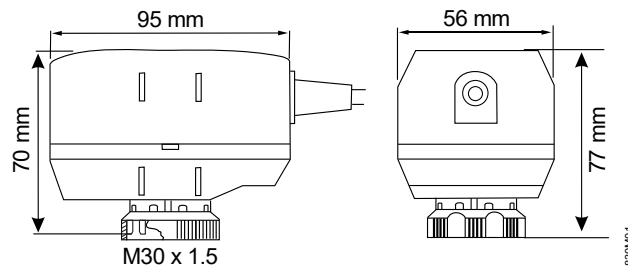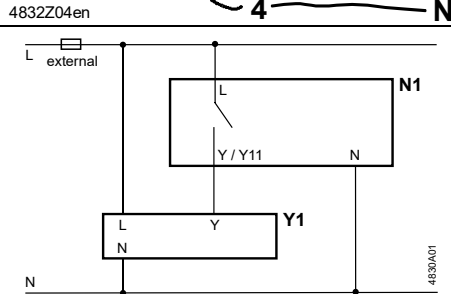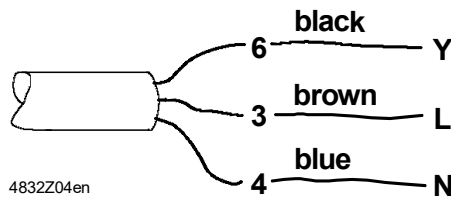

Issued by  
 Siemens Switzerland Ltd  
 Smart Infrastructure  
 Global Headquarters  
 Theilerstrasse 1a  
 CH-6300 Zug  
 Tel. +41 58 724 2424  
 www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd, 2019  
 Technical specifications and availability subject to change without notice.