



de	Montageanleitung
en	Mounting instructions
fr	Instructions de montage
sv	Monteringsinstruktion
nl	Montage-handleiding
it	Istruzioni di montaggio
fi	Asennusohje
es	Instrucciones de montaje
da	Monteringsvejledning
pl	Instrukcja montażu
cz	Montážní návod
hu	Szerelési útmutató
el	Οδηγίες εγκατάστασης
ru	Инструкция по установке
zh	安裝指導

Schneckengetriebe
Worm gear
Engrenage à vis sans fin
Snäckväxel
Wormwielverstelling
Ingranaggio a vite senza fine
Vaihteisto
Engranaje helicoidal
Snekkedrev
Przekładnia ślimakowa
Šnekové kolo
Kézi mozgató szerelvény
Χειροκίνητος μοχλισμός
Червячная передача
蜗轮式手动开关装置


ASK41NF10SP

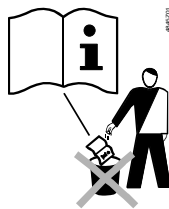

1

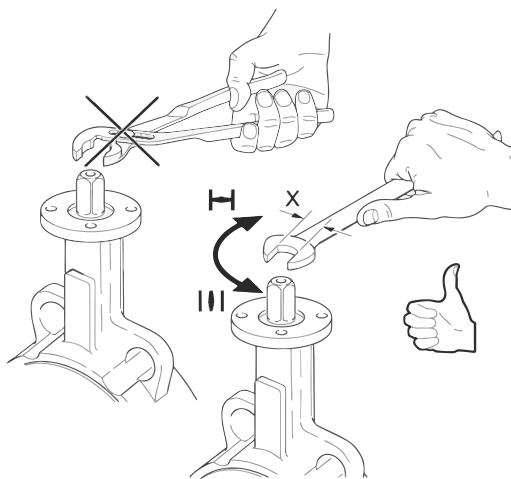


A6V12649797Z06

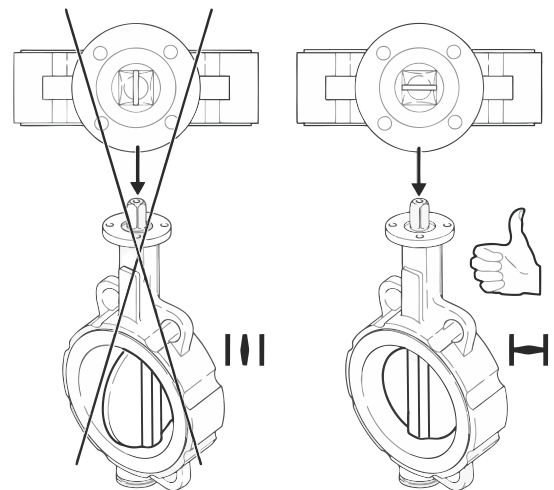


A6V12649797Z05

2

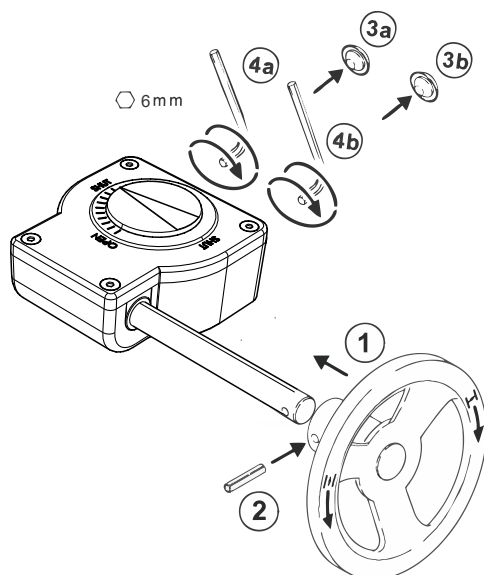


A6V12649797Z00

3

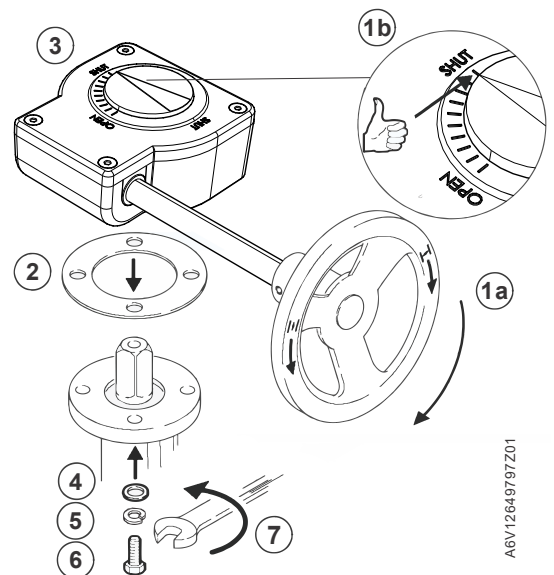


A6V12649797Z01

4

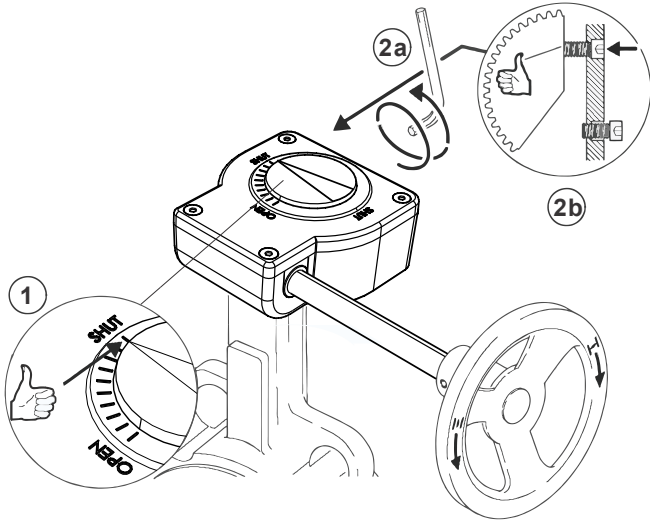


A6V12649797Z02

5

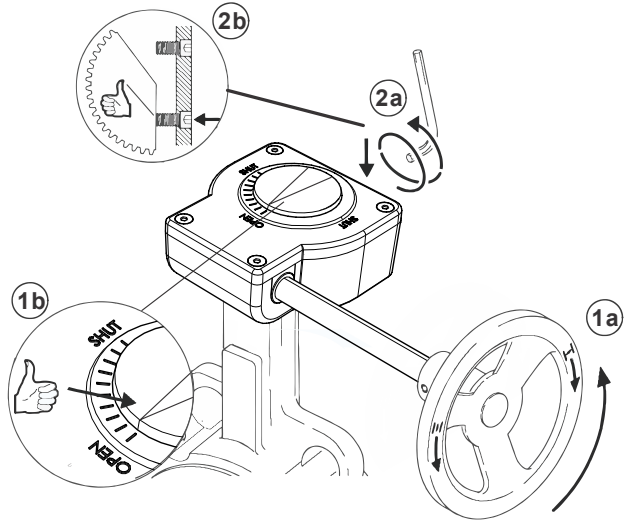


A6V12649797Z03

6

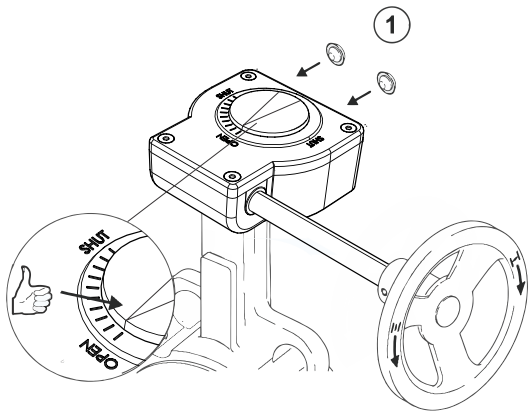

A6V12649797Z04

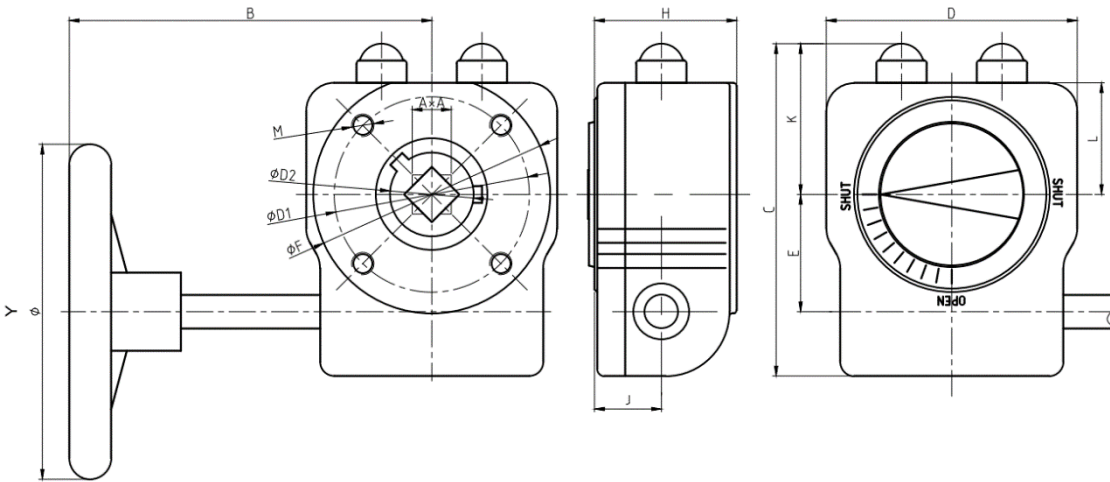

Type	DN	A	B	C	D	E	F	H	Y	D1	M	D2	J	K	L	kg
		<input type="checkbox"/>							\emptyset	\emptyset		\emptyset				[kg]
ASK41NF10SP	250...400	22	239	150	120	60	117	56	250	102	M10	43	25	65	45	3.16