



de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-handleiding
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
ru Инструкция по установке
zh 安裝指導

Handversteller
Manual adjuster
Levier manuel à crans
Handmanöver
Handverstelling
Comando manuale
Käsiohjain
Mando manual
Betjeningshåndtag
Dźwignia sterowania ręcznego
Páka pro ruční nastavení
Kézi állítókar
Χειροκίνητος μοχλίσμος
Ручной регулятор
手柄式开关装置


ASK41NF04SP
ASK41NF05SP
ASK41NF07SP

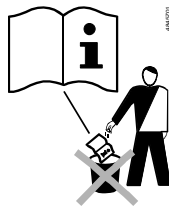

1

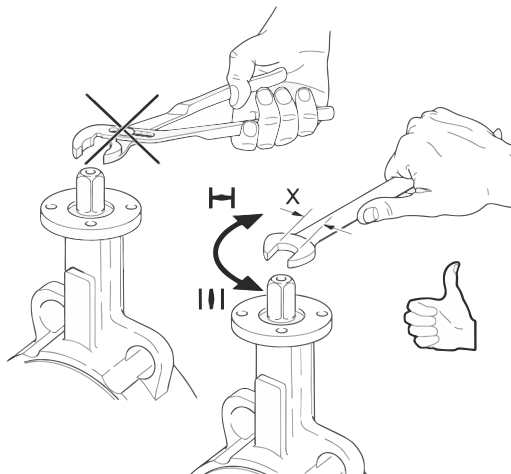


A6V12649797Z06



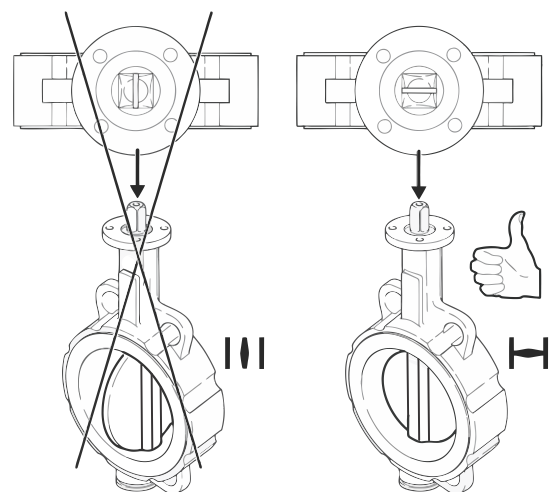


A6V12649797Z05

2

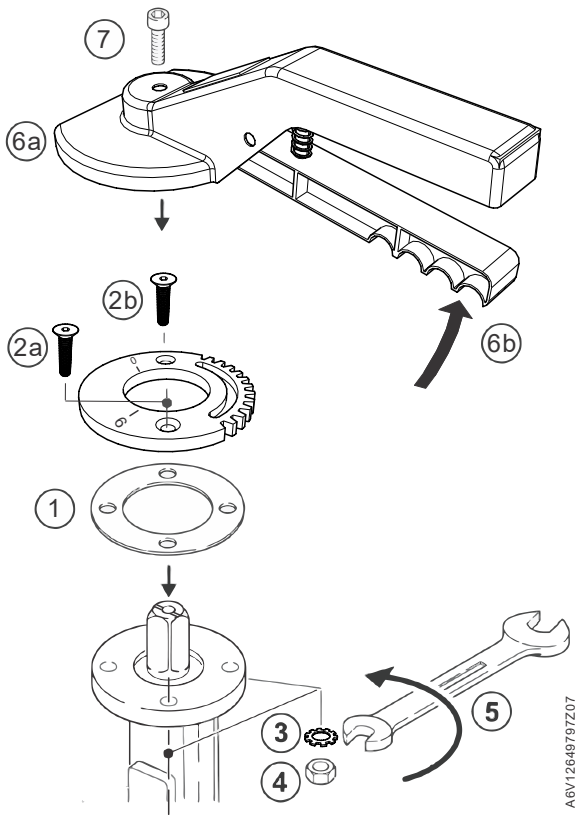

3

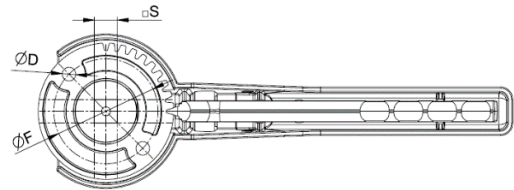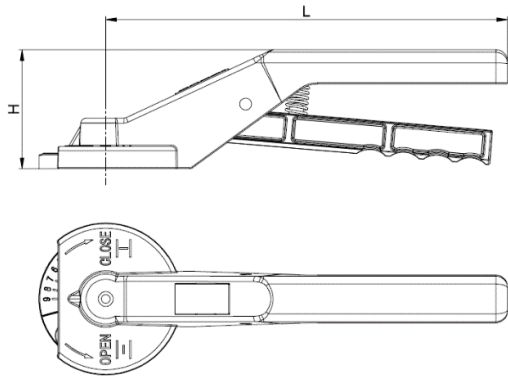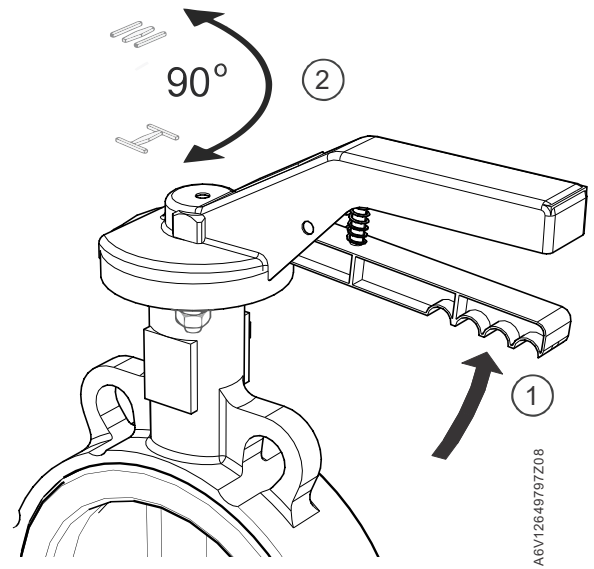

Type	DN	L	H	D	S	F	kg
				Ø	□	Ø	[kg]
ASK41NF04SP	40...65	195	68	5.5	11	42	0.32
ASK41NF05SP	80...125	195	68	6.5	14	50	0.32
ASK41NF07SP	150...200	270	80	9.0	17	70	0.64