

Communicative damper actuator for adjusting dampers in technical building installations

- Air damper size up to approx. 0.4 m²
- Torque motor 2 Nm
- Nominal voltage AC/DC 24 V
- Control communicative
- Communication via Belimo MP-Bus





Technical data

Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 19.228.8 V
	Power consumption in operation	1 W
	Dower consumption in rost position	O E W

Power consumption in rest position	0.5 W	
Power consumption for wire sizing	1.5 VA	
Connection supply / control	Cable 1 m, 3 x 0.75 mm ²	

Parallel operation Yes (note the performance data)

Functional data

Torque motor	2 Nm
Communicative control	MP-Bus
Position feedback U note	Max. 1 mA
Position accuracy	±5%
Direction of motion motor	counter-clockwise rotation
Direction of motion note	0%: left end stop, position 0
Manual override	with magnet
Angle of rotation	0287.5°
Running time motor	75 s / 90°
Adaptation setting range	manual with magnet (automatic on first power- up)
Sound power level, motor	35 dB(A)
Mechanical interface	Universal shaft clamp 612.7 mm
Position indication	Mechanically, pluggable (with integrated magnet for gear disengagement)

Safety data

Destruction along IEC/EN	THE CASE AND LANGUAGE (CELLO)	
Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)	
Power source UL	Class 2 Supply	
Degree of protection IEC/EN	IP54	
Degree of protection NEMA/UL	NEMA 2	
Enclosure	UL Enclosure Type 2	
EMC	CE according to 2014/30/EU	
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14	
Certification UL	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case	
Mode of operation	Type 1	
Rated impulse voltage supply / control	0.8 kV	
Pollution degree	3	
Ambient temperature	-3050°C	
Storage temperature	-4080°C	
Ambient humidity	Max. 95% RH, non-condensing	
Servicing	maintenance-free	



Weight Weight 0.22 kg

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning
 systems and must not be used outside the specified field of application, especially in aircraft or
 in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Mode of operation

The actuator receives its digital positioning signal from the higher level controller via the MP-Bus and drives to the position defined. Connection U serves as communication interface and does not supply an analogue measuring voltage.

Note: Neither a conventional operation with a standard signal nor a parametrisation of signals (e.g. running time) is possible. With the parametrisation devices a functional check can be executed and the MP adress can be assigned.

Simple direct mounting

The actuator is mounted directly on the damper shaft (\emptyset 6...12.7 mm) with a universal shaft clamp and then secured with the anti-rotation clip, to prevent it from rotating.

The anti-rotation clip Z-ARCM is included in the scope of delivery.

Manual override

Manual override with magnet possible (the gear is disengaged as long as the magnet adheres to the magnet symbol). The magnet for gear disengagement is integrated in the position indication.

After a manual override, it is mandatory that an adaptation via magnet be triggered at the position intended for this purpose.

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Home position

The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaptation, which is when the operating range and position feedback adjust themselves to the mechanical setting range.

The actuator then moves into the position defined by the positioning signal.

ccw.

Adaptation and synchronisation

An adaptation can be triggered manually through activation of the magnet switch or with the PC-Tool. Both mechanical end stops are detected during the adaptation (entire setting range).

The actuator then moves into the position defined by the positioning signal.

Hidden synchronisation

If the actuator drives to the lower end stop during ongoing operation, then it performs a synchronisation.

Accessories

Gateways	Description	Туре	
	Gateway MP zu BACnet MS/TP	UK24BAC	
	Gateway MP to Modbus RTU	UK24MOD	



Technical data sheet CM24-MPL-L

Electrical accessories

Service tools

Description	Туре
MP-Bus power supply for MP actuators	ZN230-24MP
Description	Туре
Service Tool, with ZIP-USB function, for parametrisable and	ZTH EU
communicative Belimo actuators, VAV controller and HVAC performance	
devices	
Belimo PC-Tool, Software for adjustments and diagnostics	MFT-P
Adapter for Service-Tool ZTH	MFT-C
Connection cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection	ZK2-GEN

Electrical installation




Supply from isolating transformer.

to MP/PP terminal

Parallel connection of other actuators possible. Observe the performance data.

Wiring diagrams

AC/DC 24 V, MPL

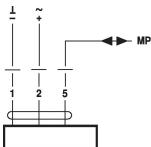

Cable colours:

1 = black


2 = red

5 = orange


Functions

Functions when operated on MP-Bus

Connection on the MP-Bus

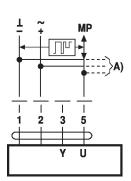

A) additional MP-Bus nodes (max. 8)

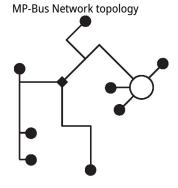


There are no restrictions for the network topology (star, ring, tree or mixed forms are permitted).

Supply and communication in one and the same 3-wire cable

- no shielding or twisting necessary
- no terminating resistors required



Operating controls and indicators

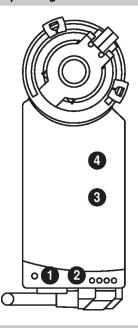

1 LED display yellow

On: Angle of rotation adaptation active

2 LED display green

Off: No supply or no MP-Bus level

On: Power supply and MP-Bus level OK, no MP communication

Flickering: MP communication active

Flashing: Depiction of MP address (Command from MP master)

Magnet switch


Magnetized: Triggering the angle of rotation adaptation

Magnet disengagement

Magnetized: Gear disengages, manual override possible

Service


Service tools connection The actuator can be parametrised by ZTH EU via terminal connection. For extended parametrisation the PC tool can be connected.

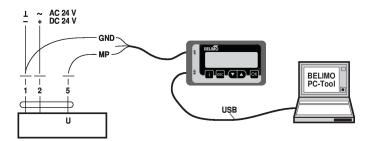


Dimensions

Spindle length









Clamping range

OŢ.	1	◇ I
612.7	6/8/10	612.7

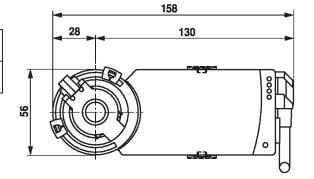

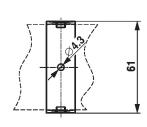

Further documentation

- Overview MP Cooperation Partners
- Tool connections
- Introduction to MP-Bus Technology



Application notes

 \bullet For digital control of actuators in VAV applications patent EP 3163399 must be considered.