

SM24P-MP

Communicative RobustLine damper actuator for adjusting dampers in industrial plants and in technical building installations

- ${\, \bullet \,}$  Air damper size up to approx. 4  $m^2$
- Torque motor 20 Nm
- Nominal voltage AC/DC 24 V
- Control modulating, communicative 2...10 V variable
- Position feedback 2...10 V variable
- Conversion of sensor signals
- Communication via Belimo MP-Bus

• Optimum protection against corrosion and chemical influences, UV radiation, damp and condensation

## **Technical data**



Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption in operation	3.5 W
	Power consumption in rest position	1.4 W
	Power consumption for wire sizing	6 VA
	Connection supply / control	Cable 1 m, 4 x 0.75 mm <sup>2</sup> (halogen-free)
	Parallel operation	Yes (note the performance data)
Functional data	Torque motor	20 Nm
	Torque variable	25%, 50%, 75% reduced
	Communicative control	MP-Bus
	Operating range Y	210 V
	Input Impedance	100 kΩ
	Operating range Y variable	Start point 0.530 V End point 2.532 V
	Options positioning signal	Open/close 3-point (AC only) Modulating (DC 032 V)
	Position feedback U	210 V
	Position feedback U note	Max. 0.5 mA
	Position feedback U variable	Start point 0.58 V End point 2.510 V
	Position accuracy	±5%
	Direction of motion motor	selectable with switch 0/1
	Direction of motion note	Y = 0 V: At switch position 0 (ccw rotation) / 1 (cw rotation)
	Direction of motion variable	electronically reversible
	Manual override	with push-button, can be locked
	Angle of rotation	Max. 95°
	Angle of rotation note	can be limited on both sides with adjustable mechanical end stops
	Running time motor	150 s / 90°
	Running time motor variable	86346 s
	Adaptation setting range	manual
	Adaptation setting range variable	No action
		Adaptation when switched on Adaptation after pushing the gear disengagement button



Functional data	Override control	MAX (maximum position) = 100% MIN (minimum position) = 0% ZS (intermediate position, AC only) = 50%	
	Override control variable	MAX = (MIN + 32%)100% MIN = 0%(MAX - 32%) ZS = MINMAX	
	Sound power level, motor	45 dB(A)	
	Mechanical interface	Universal shaft clamp 1420 mm	
	Position indication	Mechanically, pluggable	
Safety data	Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)	
	Power source UL	Class 2 Supply	
	Degree of protection IEC/EN	IP66/67	
	Degree of protection NEMA/UL	NEMA 4X	
	Enclosure	UL Enclosure Type 4X	
	EMC	CE according to 2014/30/EU	
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14	
	Certification UL	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case	
	Mode of operation	Туре 1	
	Rated impulse voltage supply / control	0.8 kV	
	Pollution degree	4	
	Ambient temperature	-3050°C	
	Storage temperature	-4080°C	
	Ambient humidity	Max. 100% RH	
	Servicing	maintenance-free	
Weight	Weight	1.8 kg	

Safety notes



 This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- Junction boxes must at least correspond with enclosure IP degree of protection!
- The cover of the protective housing may be opened for adjustment and servicing. When it is closed afterwards, the housing must seal tight (see installation instructions).
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The cables must not be removed from the device installed in the interior.
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section, the design, the installation situation and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The information on chemical resistance refers to laboratory tests with raw materials and finished products and to trials in the field in the areas of application indicated.
- The materials used may be subjected to external influences (temperature, pressure, constructional fixture, effect of chemical substances, etc.), which cannot be simulated in laboratory tests or field trials.
- The information regarding areas of application and resistance can therefore only serve as a guideline. In case of doubt, we definitely recommend that you carry out a test. This information does not imply any legal entitlement. Belimo will not be held liable and will provide no warranty. The chemical or mechanical resistance of the materials used is not alone sufficient for judging the suitability of a product. Regulations pertaining to combustible liquids such as solvents etc. must be taken into account with special reference to explosion protection.
- Flexible metallic cable conduits or threaded cable conduits of equal value are to be used for UL (NEMA) Type 4X applications.
- When used under high UV loads, e.g. extreme sunlight, the use of flexible metallic or equivalent cable conduits is recommended.

#### **Product features**

Fields of application	The actuator is particularly suitable for utilisation in outdoor applications and is protected against the following weather conditions: - Wood drying - Animal breeding - Food processing - Agriculture - Indoor swimming pools / bathhouses - Rooftop ventilation plant rooms - General outdoor applications - Alternating climate - Laboratories
Resistances	Noxious gas test EN 60068-2-60 (Fraunhofer Institut ICT / DE) Salt fog spray test EN 60068-2-52 (Fraunhofer Institut ICT / DE) Ammoniac test DIN 50916-2 (Fraunhofer Institut ICT / DE) Climate test IEC60068-2-30 (Trikon Solutions AG / CH) Disinfectant (animals) (Trikon Solutions AG / CH) UV Test (Solar radiation at ground level) EN 60068-2-5, EN 60068-2-63 (Quinel / Zug CH)
Used materials	Actuator housing polypropylene (PP) Cable glands / hollow shaft polyamide (PA) Connecting cable FRNC Clamp / screws in general Steel 1.4404 Seals EPDM Form fit insert aluminium anodised



Mode of operation	Conventional operation:
	The actuator is connected with a standard modulating signal of 010 V and drives to the position defined by the positioning signal. The measuring voltage U serves for the electrical display of the actuator position 0.5100% and as slave control signal for other actuators. Operation on Bus:
	The actuator receives its digital positioning signal from the higher level controller via the MP- Bus and drives to the position defined. Connection U serves as communication interface and does not supply an analogue measuring voltage.
Converter for sensors	Connection option for a sensor (passive or active sensor or switching contact). The MP actuator serves as an analogue/digital converter for the transmission of the sensor signal via MP-Bus to the higher level system.
Parametrisable actuators	The factory settings cover the most common applications. Single parameters can be modified with the Belimo Service Tools MFT-P or ZTH EU.
Simple direct mounting	Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an anti- rotation device to prevent the actuator from rotating.
Manual override	Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked).
Adjustable angle of rotation	Adjustable angle of rotation with mechanical end stops. Standard setting 090°. The housing cover must be removed to set the angle of rotation.
High functional reliability	The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.
Home position	The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out a synchronisation. The synchronisation is in the home position (0%).
	The actuator then moves into the position defined by the positioning signal.
	$(1) \frac{Y = 0 V}{Y = 0 V} \xrightarrow{\text{ccw}} (1) \frac{Y = 0 V}{Y = 0 V}$
Adaptation and synchronisation	An adaptation can be triggered manually by pressing the "Adaptation" button or with the PC- Tool. Both mechanical end stops are detected during the adaptation (entire setting range).
	Automatic synchronisation after pressing the gearbox disengagement button is configured. The synchronisation is in the home position (0%).
	The actuator then moves into the position defined by the positioning signal.

A range of settings can be adapted using the PC-Tool (see MFT-P documentation)

## Accessories

Gateways	Description	Туре
	Gateway MP zu BACnet MS/TP	UK24BAC
	Gateway MP to Modbus RTU	UK24MOD
Electrical accessories	Description	Туре
	Auxiliary switch 2 x SPDT add-on, grey	S2A GR
	Feedback potentiometer 140 $\Omega$ add-on	P140A
	Feedback potentiometer 200 $\Omega$ add-on	P200A
	Feedback potentiometer 500 $\Omega$ add-on	P500A
	Feedback potentiometer 1 k $\Omega$ add-on	P1000A
	Feedback potentiometer 2.8 kΩ add-on	P2800A
	Feedback potentiometer 5 k $\Omega$ add-on	P5000A
	Feedback potentiometer 10 k $\Omega$ add-on	P10000A
Service tools	Description	Туре
	Service Tool, with ZIP-USB function, for parametrisable and communicative Belimo actuators, VAV controller and HVAC performance	ZTH EU
	devices	
	Belimo PC-Tool, Software for adjustments and diagnostics	MFT-P
	Adapter for Service-Tool ZTH	MFT-C






Supply from isolating transformer.


Parallel connection of other actuators possible. Observe the performance data.

MP-Bus Network topology

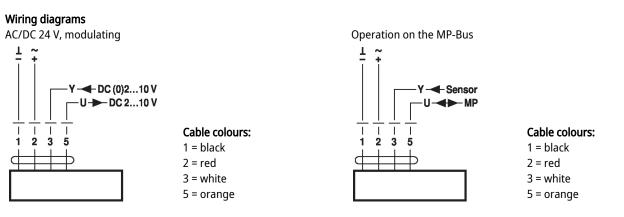


#### **Functions**


Functions when operated on MP-Bus Connection on the MP-Bus

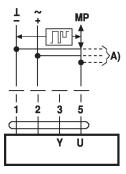

Connection of active sensors

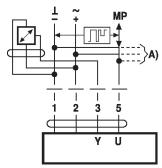

Connection of passive sensors

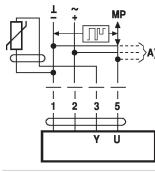


A) additional MP-Bus nodes


(max. 8)

A) additional MP-Bus nodes (max. 8)


- Supply AC/DC 24 V
- Output signal DC 0...10 V (max. DC 0...32 V)
- Resolution 30 mV

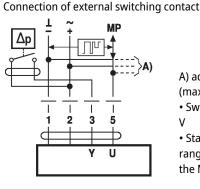

- There are no restrictions for the network topology (star, ring, tree or mixed forms are permitted). Supply and communication in one and the same 3-wire cable • no shielding or twisting necessary
- no terminating resistors required

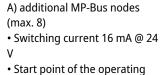

range must be parametrised on the MP actuator as  $\geq 0.5$  V

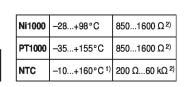



A) additional MP-Bus nodes (max. 8) 1) Depending on the type 2) Resolution 1 Ohm Compensation of the measured value is recommended



## Functions with basic values (conventional mode)

Override control with AC 24 V with relay contacts

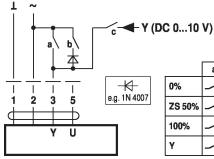

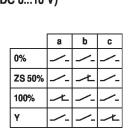

Minimum limit with positioner SG..

Control remotely 0...100% with positioner SG..



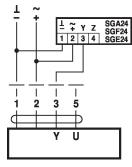


Image: second constraints
Image: second constrat
Image: second constraint
Image

Follow-up control (position-dependent)

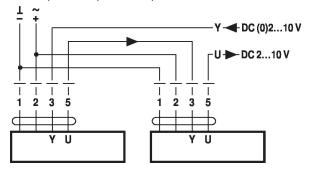



**Functional check** 

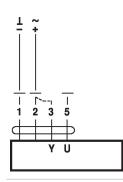


## Procedure

Override control with AC 24 V with rotary switch

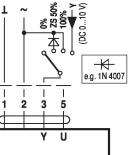

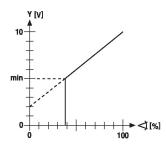

Control with 4...20 mA via external resistor

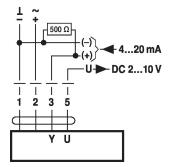


#### Caution:

The operating range must be set to DC 2...10 V. The 500  $\Omega$  resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V



## Functions for actuators with specific parameters (Parametrisation necessary)

Override control and limiting with AC 24 V with relay contacts Override control and limiting with AC 24 V with rotary switch

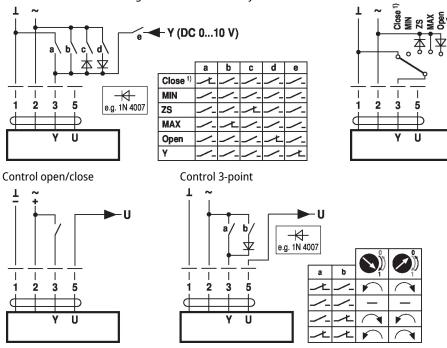

1) **Caution:** This function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.

## Operating controls and indicators

Adaption - 2 Power Address - 3 Status

#### Direction of rotation switch Switch over: Direction of rotation changes 2 Push-button and LED display green Off: No power supply or malfuntion On: In operation Press button: Triggers angle of rotation adaptation, followed by standard mode O Push-button and LED display yellow Off: Standard mode Flickering: MP communication active On: Adaptation or synchronising process active Flashing: Request for addressing from MP master Confirmation of the addressing Press button: 4 Gear disengagement button Press button: Gear disengages, motor stops, manual override possible Release button: Gear engages, synchronisation starts, followed by standard mode 5 Service plug For connecting parameterisation and service tools **Check power supply connection** Possible wiring error in power supply 2 Off and 3 On

(DC 0...

-

e.g. 1N 4007



#### Service

Service tools connection

tion The actuator can be parametrised by ZTH EU via the service socket. For an extended parametrisation the PC tool can be connected.

Connection ZTH EU / PC-Tool




## Dimensions


# Spindle length

	-
!	2058

# **Clamping range**

OI	1	$\mathbf{A}$
1420	1014	1420

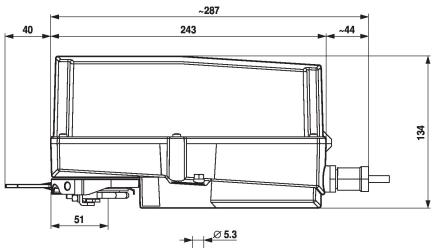

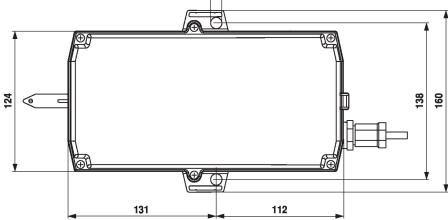

#### **Further documentation**

- Overview MP Cooperation Partners
- Tool connections
- Introduction to MP-Bus Technology

## **Application notes**

• For digital control of actuators in VAV applications patent EP 3163399 must be considered.