# FTK+ (LCD) RS485 Modbus

Duct sensor for humidity and temperatur



#### **Datasheet**

Subject to technical alteration Issue date: 28.02.2022 • A120







#### » APPLICATION

Duct sensor for measuring humidity and temperature in gaseous media of heating, ventilation and air-conditioning systems. In delivery condition, the sensor is designed for measuring temperature and relative humidity. Alternatively the output can be set to absolute humidity, enthalpy or dew point (depending on the model, changeable via jumper or using Thermokon USEapp). LCD models with RGB background light have a transparent cover. Display configuration and threshold values for color changes can be parameterized via Thermokon USEapp. A mounting flange and fixing material are included in delivery.

# »TYPES AVAILABLE

Duct humidity sensor optional with display temperature + humidity - active RS485 Modbus

- FTK+ 140 (LCD) RS485 Modbus incl. MF20
- FTK+ 270 (LCD) RS485 Modbus incl. MF20
- FTK+ 400 (LCD) RS485 Modbus incl. MF20

## » SECURITY ADVICE - CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

## » PRODUCT TESTING AND CERTIFICATION



### Declaration of conformity

The declaration of conformity of the products can be found on our website https://www.thermokon.de/

## » NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

Page 2 / 6 Issue Date: 28.02.2022 Issue Date: 28.02.2022 Page 3 / 6

## »BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage  $(\pm 0,2 \text{ V})$  this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =.

At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.

A recalibration can be carried out directly on the unit or via a software variable (app or bus).

Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

#### » APPLICATION NOTICE FOR HUMIDITY SENSORS

For standard environmental conditions re-calibration is recommended once a year to maintain the specified accuracy. A re-calibration may be required sooner than specified, or the sensor element may have to be exchanged when exposed to the following environmental conditions:

- Mechanical stress
- Contamination (dust / fingerprints e.g.)
- Abrasive chemicals
- Environmental influences (e.g. condensation on measuring element)

Re-calibration and deterioration of the humidity sensor due to environmental conditions are not subject of the general warranty.

Refrain from touching the sensitive humidity sensor/element. Touching the sensitive surface will void warranty.

#### »TECHNICAL DATA

Measuring values	temperature, humidity (humidity output configurable)		
Output voltage	$2x010$ V or $05$ V, min. load $10k\Omega$ (live-zero configuration via Thermokon USEapp)		
Network technology	RS485 Modbus, RTU, half-duplex, baud rate 9.600, 19.200, 38.400 or 57600, parity: none (2 stopbits), even or odd (1 stopbit)		
Power supply	1535 V = or 1929 V ~ SELV With alternating voltage, the correct polarity must be ensured		
Power consumption	max. 2,5 W (24 V =)   4,3 VA (24 V ~)		
Measuring range temp.	-20+80 °C (default setting), optionally configured via Thermokon USEapp		
Measuring range humidity	0100% rH non-condensing, optionally configured via Thermokon USEapp (enthalpy, absolute humidity, dew point)		
Accuracy temperature	±0,3 K (typ. at 21 °C)		
Accuracy humidity	±2% between 1090% rH (typ. at 21 °C)		
Air speed	max. 12 m/s		
Display (optional)	LCD 29x35 mm with RGB backlight		
Enclosure	enclosure USE-M, PC, pure white, with removable cable entry, LCD: cover PC, transparent, UV resistant		
Protection	IP65 according to EN 60529		
Cable entry	M25 for cable max. Ø=7 mm, seal insert for fourfold cable entry		
Connection electrical	<b>Mainboard</b> removable plug-in terminal, max. 2,5 mm²	<b>Plug-in card</b> removable plug-in terminal, max. 1,5 mm²	
Pipe	PA6, black, Ø=19,5 mm, length=140   270   400 mm		
Filter	stainless steel wire mesh		
Ambient condition	-20+70 °C, short term condensation		



When several BUS devices are supplied by one 24 V AC voltage supply, it is to be ensured that all "positive" operating voltage input terminals (+) of the field devices are connected with each other and all "negative" operating voltage input terminals (-) (=reference potential) are connected together (in-phase connection of field devices). In case of reversed polarity at one field device, a supply voltage short-circuit would be caused by that device. The consequential short-circuit current flowing through this field my cause damage to it.

Therefore, pay attention to correct wiring.

Page 4 / 6 Issue Date: 28.02.2022

## »USE ENCLOSURE WITH UV AND WEATHER RESISTANCE

After some time, outdoor mounted plastics can lose their color and quality. Therefore, all USE housings are made of special white polycarbonate (PC). The light-stable colorants and additives are used to achieve optimum protection of the polymer while maintaining color stability. The titanium dioxide used is specially developed for polycarbonate and offers excellent UV protection through the reflection of the entire light spectrum including the UV component by 340 nm. This effectively counteracts the otherwise occurring photochemical polymer degradation. The colors stay full for a long time without fading. The material is also resistant to cold and frost.

## **»** CONFIGURATION




The Thermokon bluetooth dongle with micro-USB is required for communication between USEapp and USE-M / USE L (Item No..: 668262). Commercial bluetooth dongles are not compatible.

Application-specific reconfiguration of the devices can be carried out using the Thermokon USEapp. The configuration is carried out in the voltage-supplied state.

The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.

### » APPLICATION NOTICE







After a certain time, dirt in the air can collect on the filter and then adversely affect the operation of the sensor. Under normal ambient condition an annual maintenance is recommended. Rinse the filter after cleaning with distilled water and dry it using clean oil-free air or nitrogen. Extremely contaminated filters should be replaced. At extreme ambient conditions, e.g. corrosive gases, the humidity sensor may have to be changed.

#### » MOUNTING ADVICES

The sensor can be mounted on the ventilation duct by means of the mounting flange MF20 TPO (optional with mounting base).

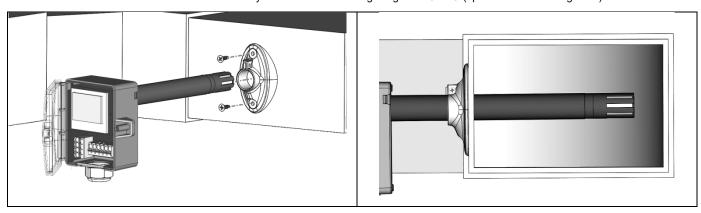



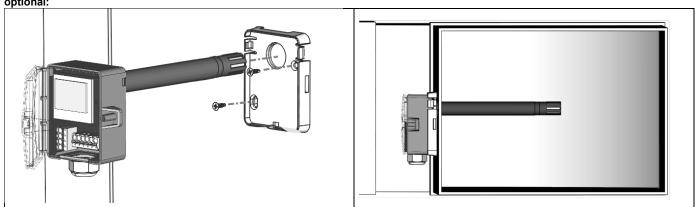


Issue Date: 28.02.2022 Page 5 / 6

## » CONNECTION PLAN


To change the output voltage range (default 0..10 V to 0..5 V) via jumper, the display must be removed from the board first.

## FTK+ (LCD) **RS485**

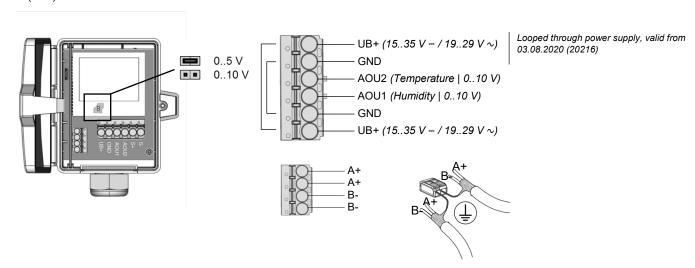

# » DIP SWITCHES, PLUG-IN CARD














B A Service LP ROH AP\_RS485\_ML ON Service Serv

\*default

The modbus address of the device is set in the range of 1 ... 31 (binary encoded) using a 5-pole DIP switch. With address 0 via DIP, an extended address range (32..247) is available via USEapp.



Address	Access	Description	Resolution / Unit	
1	R	relative humidity	0.1	%rH

## Register 400 = 1 (Unit SI)

···· <b>g</b> ································					
Address	Access	Description	Resolution / Unit		
0	R	Temperature	SI	0.1	°C
2	R	Absolute humidity	SI	0.01	g/m³
3	R	Enthalpy	SI	0.1	kJ/kg
4	R	Dew point	SI	0.1	°C

### Register 400 = 2 (Unit Imperial)

Address	Access	Description	Resolution / Unit		
0	R	Temperature	Imperial	0.1	°F
2	R	Absolute humidity	Imperial	0.01	gr/ft³
3	R	Enthalpy	Imperial	0.1	BTU/lb
4	R	Dew point	Imperial	0.1	°F

Page 6 / 6 Issue Date: 28.02.2022




### Modbus addresses:

USE-RS485 Modbus Interface

A detailed description of the Modbus addresses can be found under the following link:  $\rightarrow$  **Download** 

# » DIMENSIONS (MM)

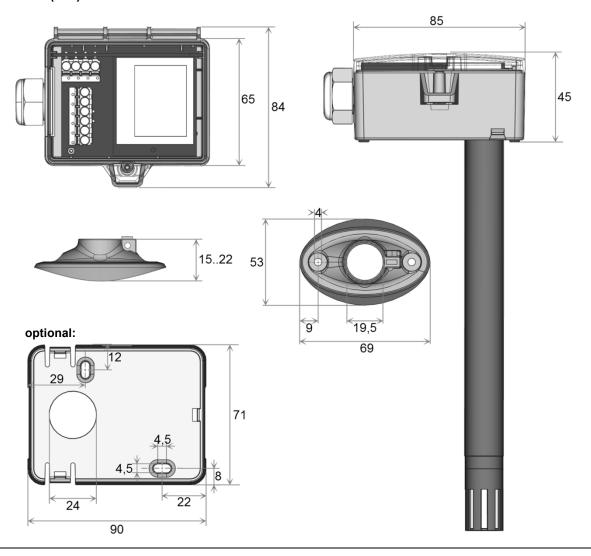

# » ACCESSORIES (INCLUDED IN DELIVERY)

Mounting flange MF20 TPO Item No. 612562
Mounting kit universal Item No. 698511

• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)

# » ACCESSORIES (OPTIONAL)

Bluetooth-Dongle
RS485 Modbus Converter -USB
Mounting base
Filter stainless steel, wire mesh

Item No. 668293
Item No. 631228
Item No. 231169