» LI65+ RS485 BACnet

Outdoor multi-sensor



Datasheet

Subject to technical alteration Issue date: 14.08.2020 • A110





» APPLICATION

Outdoor sensor measuring light, temperature, humidity and atmospheric pressure typically used in lighting applications to optimise energy efficiency through lighting control. The device is designed for outdoor areas, greenhouses, warehouses or industrial halls. The device has an integrated ambient light sensor with precise optical filtering adapted to the human eye. Depending on the model, the sensor can be individually configured via Thermokon USEapp. Tool-free opening, closing and wiring as well as removable cable entries ensure quick and easy installation.

»TYPES AVAILABLE

Outdoor sensor light + temperature - active BUS

Li65+ Temp RS485 BACnet MS/TP

Outdoor sensor light + temperature + humidity - active BUS

Li65+ Temp_rH RS485 BACnet MS/TP

Outdoor sensor light + temperature + humidity + atmospheric pressure – active BUS

Li65+ Temp_rH_hPa RS485 BACnet MS/TP

Page 2 / 6 Issue Date: 14.08.2020

» SECURITY ADVICE - CAUTION



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage ($\pm 0.2 \text{ V}$) this is normally done by adding or reducing a constant offset value. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0..10 V / 4..20 mA have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of the USEapp software and an optional Bluetooth interface.

» APPLICATION NOTICE FOR HUMIDITY SENSORS


Refrain from touching the sensitive humidity sensor/element. Touching the sensitive surface will void warranty.

For standard environmental conditions re-calibration is recommended once a year to maintain the specified accuracy.

When exposed to high ambient temperature and/or high levels of humidity or presence of aggressive gases (i.e. chlorine, ozone, ammonia) the sensor element may be affected and re-calibration may be required sooner than specified. Re-calibration and deterioration of the humidity sensor due to environmental conditions are not subject of the general warranty.

» MOUNTING ADVICES

In case of outdoor installation avoid direct rain and sun contact. Probably use sun respectively rain protection. Cable entry from bottom or side. For side cable routing set loop so that precipitation can drain defined. Observe permissible ambient condition.

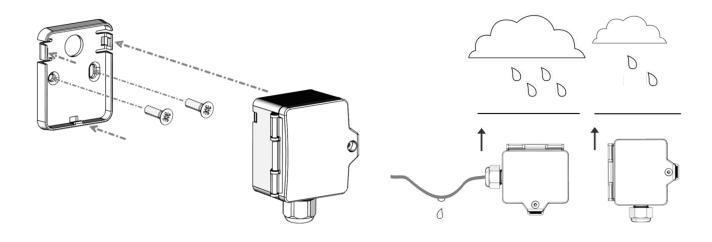

Issue Date: 14.08.2020 Page 3 / 6

»TECHNICAL DATA

Measuring values (type-dependent)	temperature, light, humidity, atmospheric pressure		
Output voltage	14x 010 V or 05 V (adjustable via jumper; live-zero configuration via Thermokon USEapp), min. load 10 $k\Omega$		
Network technology	RS485 BACnet MS/TP		
Power supply	1535 V = or 1929 V ~		
Power consumption	typ. 0,6 W (24 V =) 1,5 VA (24 V ~)		
Measuring range temp.	-40+60 0+50 -20+80 -15+35, adjustable at the transducer, default setting: -20+80 °C, (optional)		
Measuring range humidity (type-dependent)	Temp_rH Temp_rH_hPa 0100% rH non-condensing, (optional)		
Measuring range light	0200 Lux 01000 Lux (default) 02 kLux 010 kLux 020 kLux 050 kLux, selectable at the device		
Measuring range atm. Pressure (type-dependent)	Temp_rH_hPa 5001500 hPa, (optional)		
Accuracy temperature	±0,5 K (typ. at 21 °C)		
Accuracy humidity	±2% between 1090% rH (typ. at 21 °C)		
Accuracy light	±5% of measuring range		
Sensor	Ambient light sensor with precise optical filtering appropriate to the human eye		
Enclosure	enclosure USE-M, PC, pure white, cover PC, translucent		
Protection	IP65 according to EN 60529		
Cable entry	M25, for wire max. Ø=7 mm, seal insert for fourfold cable entry		
Connection electrical	Mainboard removable plug-in terminal, max. 2,5 mm²	Plug-in card removable plug-in terminal, max. 1,5 mm ²	
Ambient condition	-30+70 °C, max. 85% rH short term condensation		

» PRODUCT TESTING AND CERTIFICATION



Declaration of conformity

The declaration of conformity of the products can be found on our website https://www.thermokon.de/.

» CONFIGURATION



The Thermokon bluetooth dongle with micro-USB is required for communication between USEapp and USE-M / USE L (Item No.: 668262). Commercial bluetooth dongles are not compatible.

Application-specific reconfiguration of the devices can be performed using the Thermokon USEapp. The configuration can be performed only when the device is powered.

The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.

» APPLICATION NOTICE



The housing cover must be completely closed in order to ensure the accuracy and reproducibility of the measured values during a test or service log via USEapp.


The Bluetooth dongle snaps into the socket easily. When removing, please fix the plug-in card (option PCB) so that it is not unintentionally pulled out.


Page 4 / 6 Issue Date: 14.08.2020

» CONNECTION PLAN

If the RS485 cable is looped through, connect both cable shields using the enclosed 2-pol. Connect terminal as shown.


Li65+ RS485 BACnet MS/TP

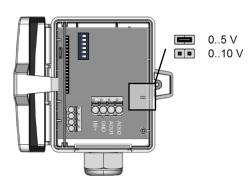







(temperature | 0..10 V) (light | 0..10 V) $(15..35 V = or 19..29 V \sim)$

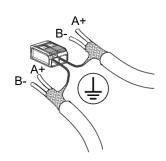

» DIP SWITCH CONFIGURATION

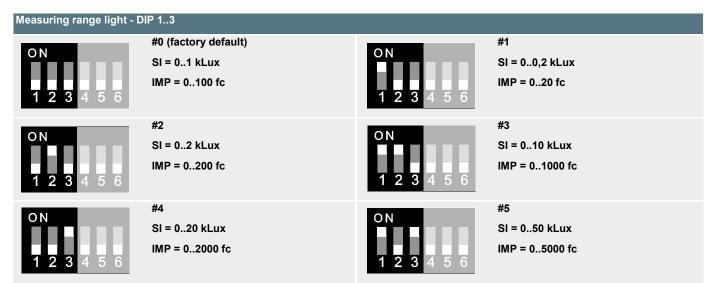





#0 (factory default)


SI = -20..+80 °C IMP = 0..+200 °F

#8 SI = 0..+50 °C IMP = +40..+140 °F

SI = -40..+60 °C IMP = -40..+160 °F

SI = -15..+35 °C IMP = 0..+100 °F

System of units - DIP 6




#0 (factory default) SI

#32 **IMP**

#24

Issue Date: 14.08.2020 Page 5 / 6

Address block 1

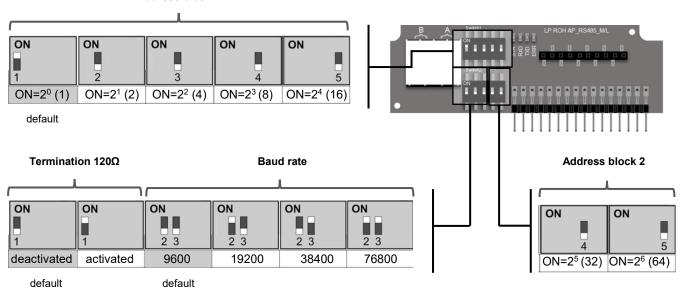

Sensor values

Object	Access	Description	COV Increment	Unit	
AI-1	R	Relative humidity	0100 %	%rH	

Object AV-38 = 1 (Unit SI)

Object	Access	Description	COV Increment	Unit	
AI-0	R	Temperature	0250	SI °C	
AI-2	R	Absolute humidity	080	SI g/m³	
AI-3	R	Relative humidity	085	SI KJ/kg	
AI-4	R	Dew point	080	SI °C	
Al-12	R	Illumination	0999.999	SI Lux	
AI-15	R	Atmospheric pressure	01200	SI hPa	

Object AV 38 = 2 (Unit Imperial)

Object	Access	Description	COV Increment	Unit	
AI-0	R	Temperature	0480	Imperial	°F
AI-2	R	Absolute humidity	035	Imperial	gr/ft³
AI-3	R	Relative humidity	040	Imperial	BTU/lb
Ai-4	R	Dew point	0200	Imperial	°F
AI-12	R	Illumination	0999.999	Imperial	fc
AI-15	R	Atmospheric pressure	01200	Imperial	inWC

Available measured values are type-dependent. The BACnet address of the device is set binary coded in the range of 1 ... 127 via 7 dip-switches. (the address 0 is reserved and cannot be selected).



BACnet Objects:


USE-RS485 BACnet interface


A detailed description of the BACnet interface can be found in our downloadcenter:


 \rightarrow **Download**

Page 6 / 6 Issue Date: 14.08.2020

» DIMENSIONS (MM)

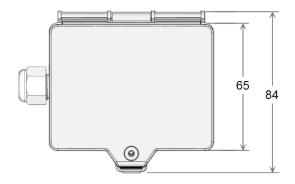

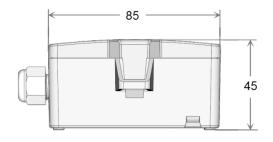

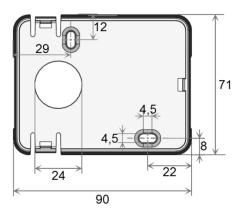

» ACCESSORIES (INCLUDED IN DELIVERY)

Mounting base Item No. 631228 Mounting kit universal Item No. 698511

• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)

» ACCESSORIES (OPTIONAL)