

## Contact temperature sensor

Active surface contact temperature sensor (0...10 V) for pipe applications. Spring- loaded brass contact pin to ensure fast response and accurate reading.

# **Technical data sheet**





22HT-12

Type Overview					
	Time	Outo	ut signal active	tomporatura	
	Type	Outp	out signal active		
	22HT-12		05 V, 01	0 V	
Technical data					
Electrical data	Nominal voltage	AC/DC 24	. <b>V</b>		
	Nominal voltage range	AC 21.6	26.4 V / DC 13.5	26.4 V	
	Power consumption AC	0.84 VA			
	Power consumption DC	0.42 W			
	Electrical connection	Pluggable 2.5 mm²	e spring loaded	terminal block	max.
	Cable entry	Cable gla	nd with strain re	elief Ø68 mn	า
Functional data	Sensor Technology	Based on	Pt1000 1/3 DIN		
	Application	Water			
	Multirange	8 measur	ing ranges selec	table	
	Voltage output	1x 05 V,	010 V, min. lo	ad 5 kΩ	
	Output signal active note	Output 0.	5/10 V with Jur	nper adjustab	le
Measuring data	Measured values	Temperat	ture		
	Measuring range temperature	Attention	Active sensor: range selectable Attention: max. measuring temperature is restricted by max. fluid temperature (see Safet		
		Setting	range [°C]	range [°F]	Factor settin
		S0	-5050	-30130	
		S1	-10120	0250	
		S2	050	40140	
		S3 S4	0250	30480	
		54 S5	-1535 0100	0100 40240	
		S6	-2080	4090	
		S7	0160	0150	
	Accuracy temperature active		21°C [±0.9°F @ ]		
	Long-term stability	±0.04°C p	o.a. @ 21°C [±0.0	7°F p.a. @ 70°	'F]
	Time constant $\tau$ (63%) on water pipe	With ther Typical 16	mal contact fluid	t	
Materials	Cable gland	PA6, black			
Materials	Housing	Cover: PC			
	Hodoling		C, orange		
		Seal: NBR	_		
		UV resista			



## Safety data

Max. 95% RH, non-condensing
-3550°C [-30120°F]
-3570°C [-30160°F]
Max. 70°C [160°F]
III, Protective Extra-Low Voltage (PELV)
Class 2 Supply
CE Marking
IEC/EN 60730-1
cULus acc. to UL60730-1A/-2-9, CAN/CSA E60730-1/-2-9
IP54
NEMA 1
UL Enclosure Type 1
ISO 9001
2

### Safety notes



This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorised modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets.

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

#### Remarks

### General remarks concerning sensors

When using lengthy connection wires (depending on the cross section used) the measuring result might be falsified due to a voltage drop at the common GND-wire (caused by the voltage current and the line resistance). In this case, 2 GND-wires must be wired to the sensor - one for supply voltage and one for the measuring current.

Sensing devices with a transducer should always be operated in the middle of the measuring range to avoid deviations at the measuring end points. The ambient temperature of transducer electronics should be kept constant. The transducers must be operated at a constant supply voltage ( $\pm 0.2$  V). When switching the supply voltage on/off, onsite power surges must be avoided.

# Build-up of self-heating by electrical dissipative power

Temperature sensors with electronic components always have a dissipative power which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. The dissipative power should be taken into account when measuring temperature. In case of a fixed operating voltage (±0.2 V) this is normally done by adding or reducing a constant offset value. As Belimo transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0...10 V / 4...20 mA have a standard setting at an operating voltage of DC 24 V. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics.

If a readjustment directly at the active sensor should be necessary during later operation, this can be done with the following adjustment methods.

- For sensors with NFC or dongle by the corresponding Belimo app
- For sensors with a trimming potentiometer on the sensor board
- For bus sensors via bus interface with a corresponding software variable




## Scope of delivery

Scope of delivery	Description	Туре	
	Fixing strap, for pipes up to Ø 40110 mm [1.64.3"]	A-22P-A47	

## **Accessories**

Optional accessories	Description	Туре
	Fixing strap, for pipes up to Ø 40250 mm [1.69.8"]	A-22P-A49
	Syringe with thermal paste	A-22P-A44
	Connection adapter, M20x1.5, for cable 1x6 mm, Multipack 10 pcs.	A-22G-A01.1

## Wiring diagram

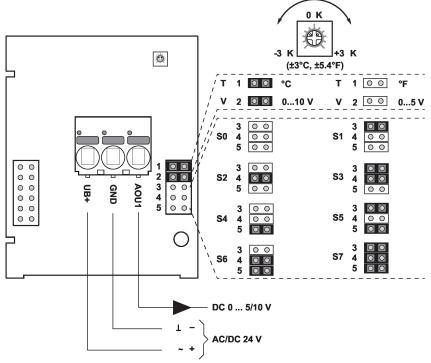


The adjustment of the measuring ranges is made by changing the bonding jumpers. The output value in the new measuring range is available after 2 seconds.

Setting	range [°C]	range [°F]	Factory setting
S0	-5050	-30130	
S1	-10120	0250	
S2	050	40140	
S3	0250	30480	
S4	-1535	0100	
S5	0100	40240	<b>~</b>
S6	-2080	4090	
S7	0160	0150	



# Dimensions

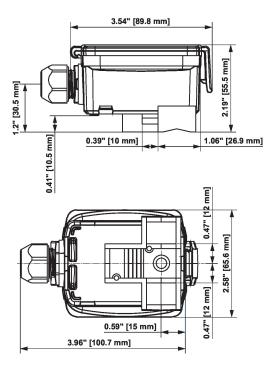

Туре	Weight	
22HT-12	0.15 kg	